

Loft flooring:


2) Examine the section of loft flooring - you will notice two small notches on one end of this piece. Make sure this side is facing in when installing this piece (see diagram). Slide the flooring into the barn's upper section and glue it into place. Note that the beams fit into the slotted areas in the flooring. Now glue the ladder into place by applying glue to the two slots as well as along the edge where it meets the wall.

Outer walls:

3) Start by gluing the front and rear walls into place. Note that the front wall has a small notch at the peak for the hoist beam. Once the front and rear walls are in place, glue on the two side walls (see diagram).

Outer trim:

4) The trim pieces are located on the trim sheet. Start by applying the front and rear trim pieces. Note that the front trim piece has an additional section to frame the upper opening as well as the hoist notch. Apply the trim pieces by removing the peel-and-stick backing and pressing the part into place. Once the front and rear pieces are in place, you can add the four small outer trim pieces to the sides of the barn.

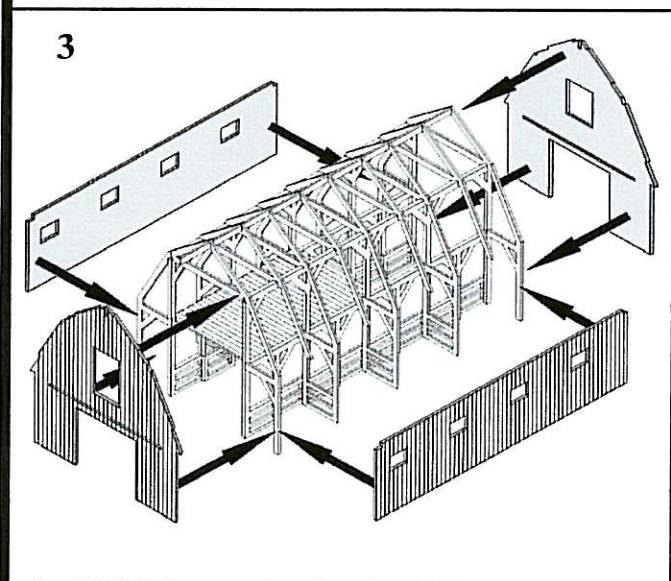

Windows and Doors:

5A) Locate the 3 pieces for each barn window - an outer trim piece, inner window frame and a section of clear glazing. Start by applying the glazing to the inner window frame using the peel-and-stick to hold it in place. Now take the window frame and apply it to the outer frame keeping it centered. Finally press the window assembly into the window opening using the peel-and-stick backing on the trim to hold it in place.

