

15-rear.

**Bay Windows:**

16a) The windows for the bay are made up in the same manner as those for the main house. Install each window in its opening as shown. Note that the windows for the diagonal walls are offset, check the diagram for proper alignment. Also add the two small side wall trim panels at this time.

**Roofing:**


17) Glue the pre-cut paper shingles to the roof panels using white glue. You may want to draw a few guidelines onto the roof first to help keep things parallel. Make sure you stagger the joints between adjacent rows of shingles as shown. The scalloped shingles can be inserted between the standard ones for a decorative effect - see diagram.

**Final Trim and steps:**


18a/b) Add the lower trim sections around the bay window. Start with the panel sections, then add the small trim strips to the top of these.

The gable trim consists of two pieces. Carefully remove each from the sheet then remove the backing from the top section and apply this to the lower section. Be careful to keep the edges even. Finally, add the trim assembly to the edges of the sub roof panels as shown.


We have included a resin chimney in your kit. We have shown a suggested location. You will need to either use a razor saw to trim the chimney base to match the roof angle or cut a hole in the roof where you want to place it.

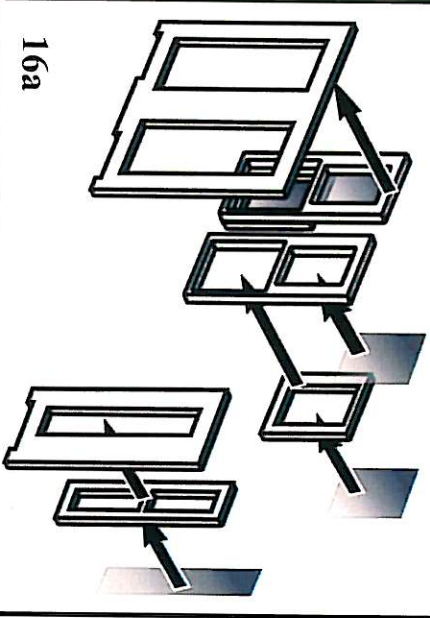


16a

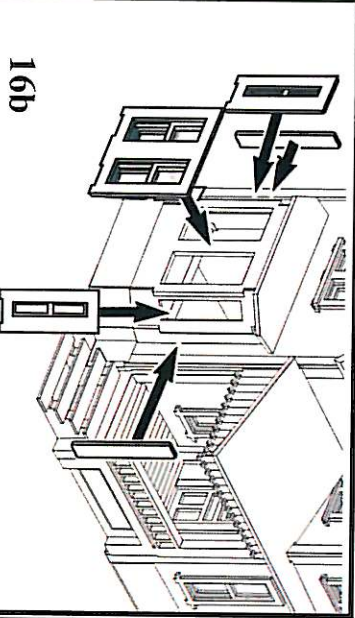


16b

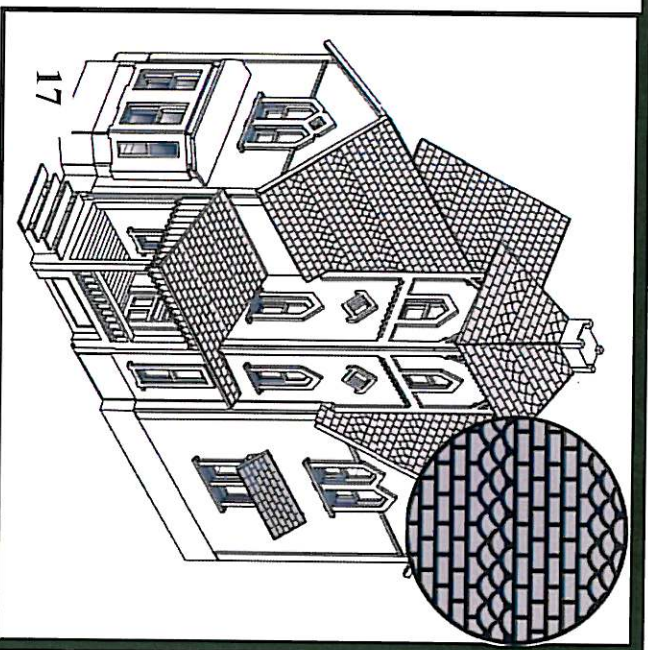

17

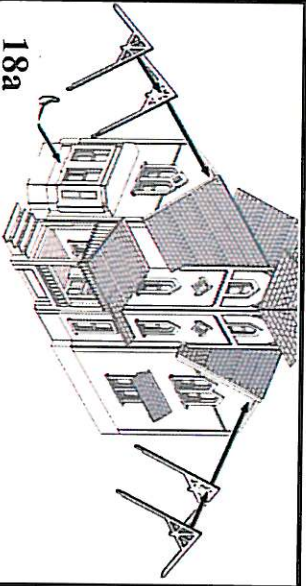

18a

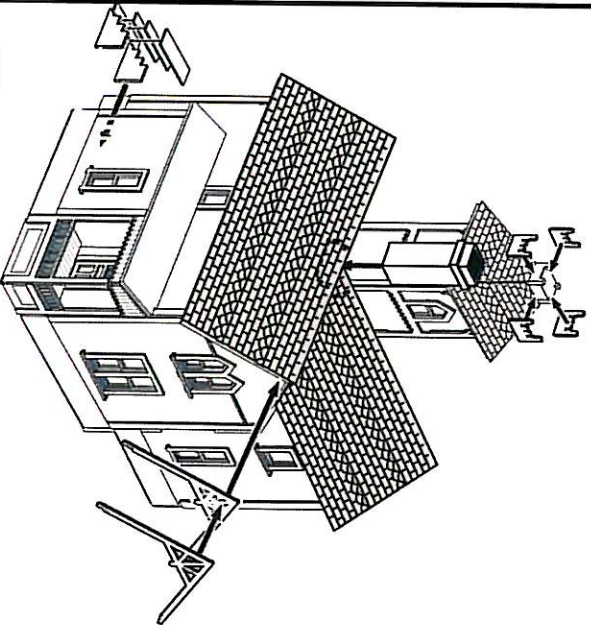

18b