

Sub Roof panels:

9) Remove the backing from the upper sub roof panel, fold it on the scribed lines and press it into as shown. Now install the roof brace for the lower side roof, gluing it into the side of the house and to the top of the flat sub roof. Remove the backing and fold the lower side roof panel on the scribe lines and press it evenly into place as shown.

Tar-paper roofing:

11) Use white glue to apply the pre cut sections of tar paper roofing to the tops of the flat roofing areas on the back of the house as shown. They can then be painted a dark gray color to represent tarpaper roofing.

Shingles:

12) The main roof is covered with pre-cut plastic roofing shingles. Remove the backing from each piece and press them into place. Once the shingle panels are in place the square piece of paper roofing can be added to the top of the roof.



The side roof shingles are applied in the same fashion. Start with the main piece, the apply the two inner pieces and the small section where the roof wraps around the back wall.

Roof trim strips:

13) We have provided several plastic strips to be cut and glued into place along the edges of the plastic roofing to form ridge caps as shown. Glue these into place using liquid plastic cement and trim to length. Once the trim strips have been added the roof can be painted and weathered. We used a red-brown followed by a wash of black and a dry-brushing of a light tan to pick out the highlights.

Side Trellace and Chimneys:

14) Glue the two trellace support pieces into the holes in the side wall of the house, then glue the two cross braces to the tabs on the tops of the main supports as shown. Now apply the two sub roof panels and the paper roofing. Finally, add the lattice wall to the side of the canopy by removing the

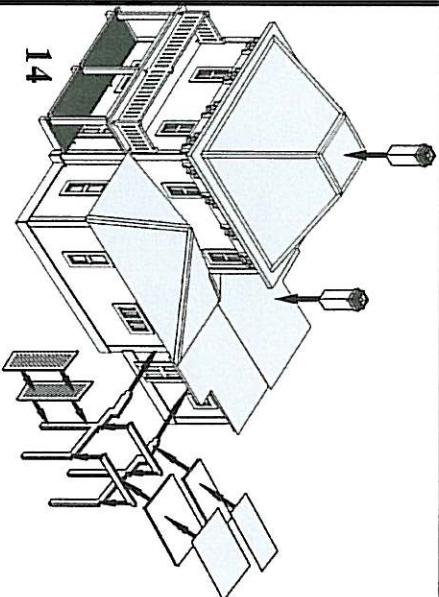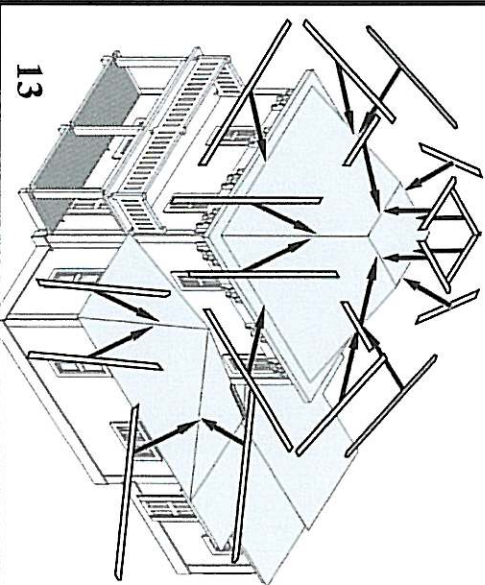

backing from each half of the lattice and sticking them to each other. The completed lattice-work can then be glued into place as shown.

To complete your house, glue the chimneys to the tops of both sections of flat roofing as shown. The prototype chimneys were white-washed to match the house.

Your kit is now complete, we hope you've enjoyed it. For a complete list of all our kits see our web site at www.branchline-trains.com

