

5C

5C) Now apply the upper trim boards to the front and rear walls of the house. These should fit flush with the top edge of the roof.

Porch railings:


6) Add the side porch roof supports and railings by gluing them into the porch flooring as well as into the tabs in the front and rear walls. Now glue the front porch railing and the rear upper trim panel into place as shown.

Subroofing and trim:


7A) Glue the two sub main roof panels using the slots to locate them to the tabs on the front and rear wall panels. Make sure that the scribed side faces downward.

7B) Now add the roof trim pieces by removing the backing from them and pressing them onto the ends of the sub roof panels.


7C) Glue the two porch sub roof panels onto the porch support posts.

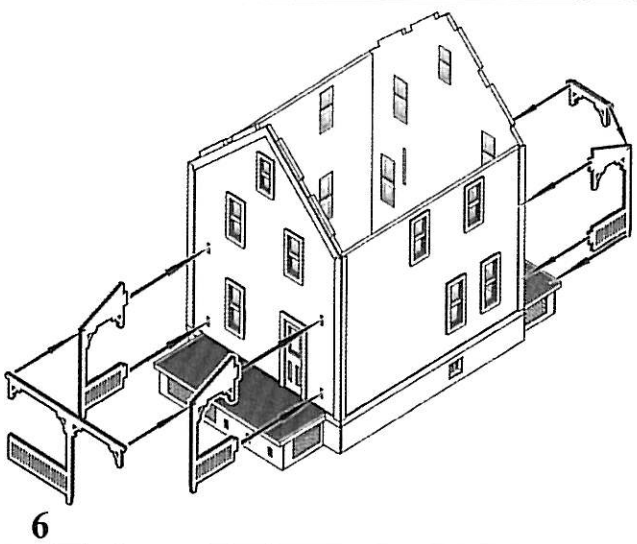


6

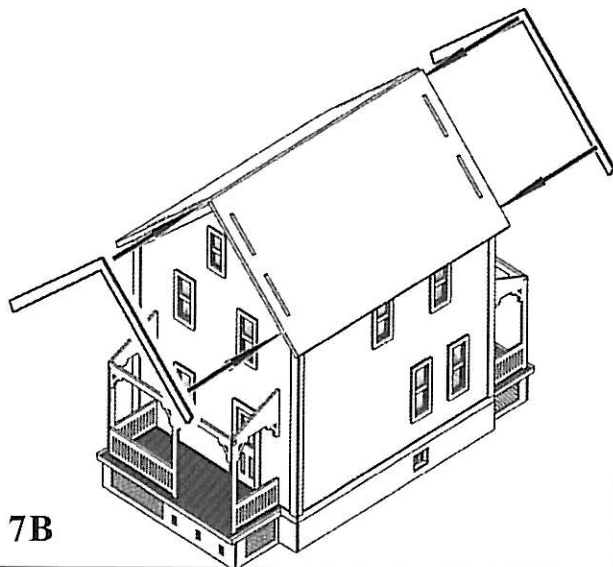

7B

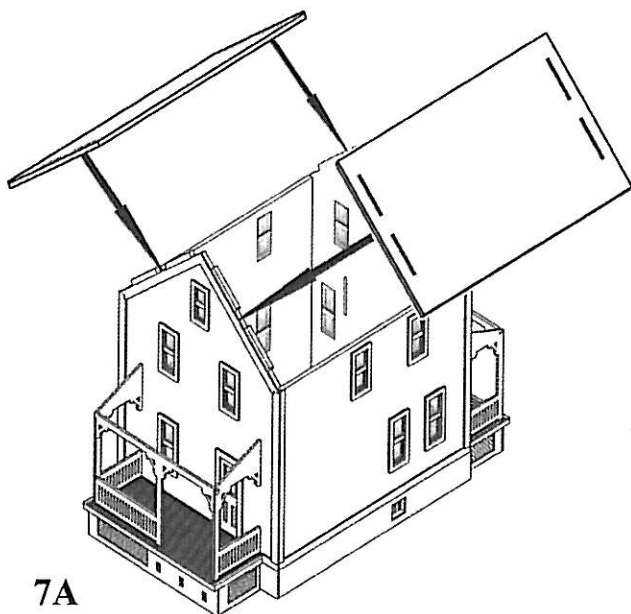

7A

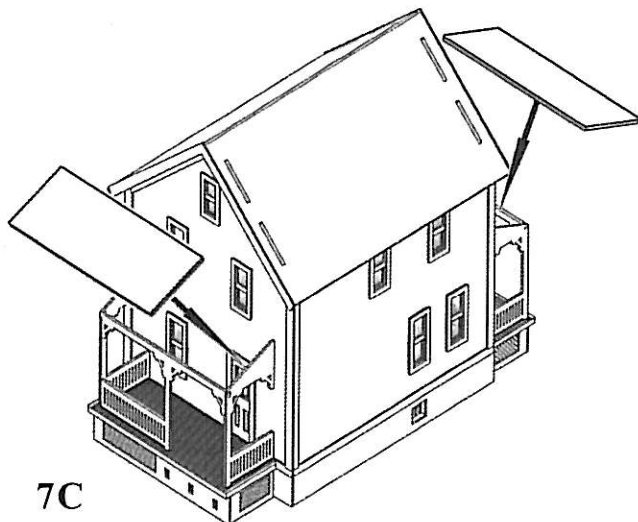

7C