

3A

Porch bases:

3A) Install the three porch front porch floor supports by gluing them into the holes at the base of the house walls. Once they are in place the front porch support wall can be glued to the front of them as shown.


Glue the rear porch supports into the slots in the wall and to each other to form a 90 degree angle.

3B) Now that the lower porch walls are complete, glue the porch flooring panels into place. These glue into the slots in the house walls and to the top edges of the porch walls.

Foundation:

4) Install the stonework by removing the peel-and-stick backing from each piece and pressing them into place along the lower edge of each wall. Start with the sides section first, followed by the front and rear. The longer side pieces will overlap the shorter front and rear sections to give a flush corner.

You can now paint the stone foundation with your choice of gray or brown paint. For added detail spend a few minutes to pick out some of the individual stones with lighter and darker shades of your base color. Once this is dry follow with a wash of light gray or black to represent the mortar between the stones (Light gray will make the foundation appear newer, black older). Finally dry brush some light gray or tan highlights .

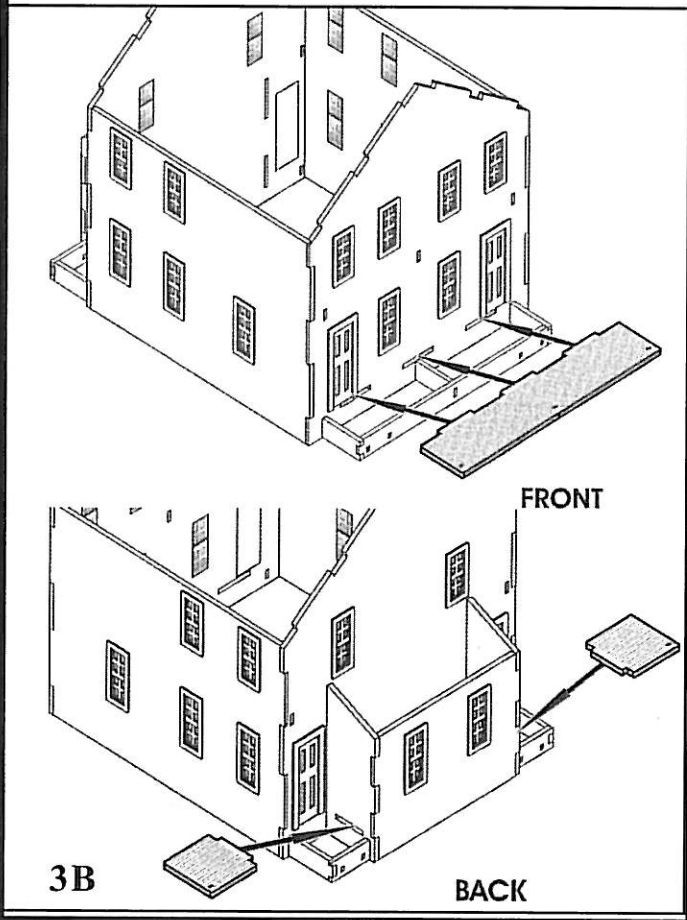

3B

