


5A

**Trim:**

5A) Starting on the sides of the house, add the trim that runs around the top of the foundation pieces. Remove the backing from each piece and press them into place just above the foundation pieces. Once the sides sections are in place, add the front pieces. These will overlap the sides to give you a flush corner.

5B) The corner trim is made up from two boards, one slightly wider than the other. Start by removing the backing from the thinner board and applying them to the side walls flush with the edges of the wall. Now apply the remaining trim boards so that they overlap the edges of the narrow boards giving a flush corner.

5C) Now apply the upper trim boards to the front and rear walls of the house. These should fit flush with the top edge of the roof.

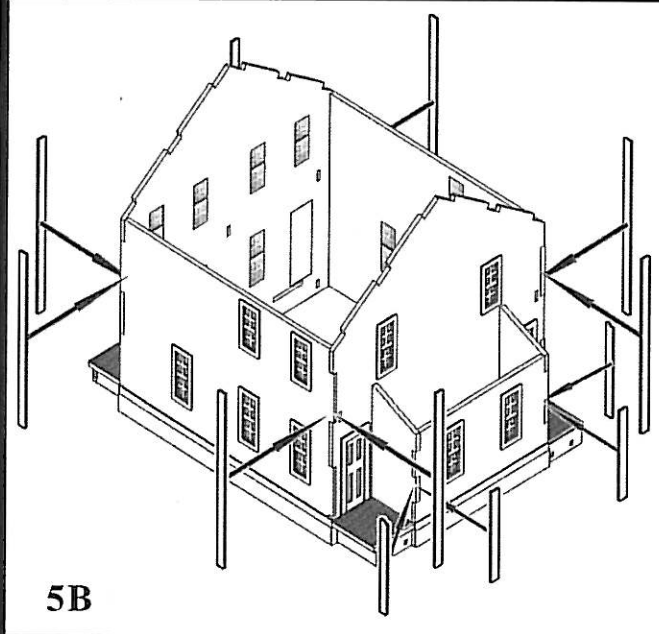


5B

**Porch roof supports:**


6) Add the porch roof supports by gluing them into the holes in the porch flooring and into the slots in the walls. Make sure you have the proper pieces for each section as the two rear supports differ slightly from the front three.

**Subroofing and trim:**


7A) Apply the sub roof panels to the front and rear porches by gluing them onto the top of the porch roof supports.

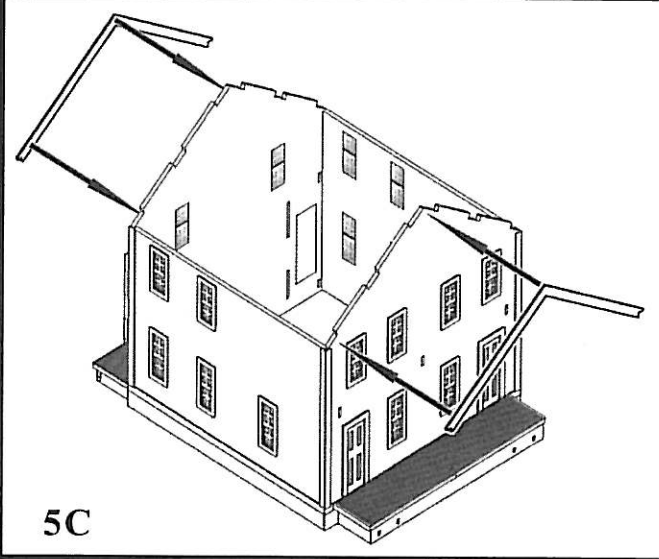

5C

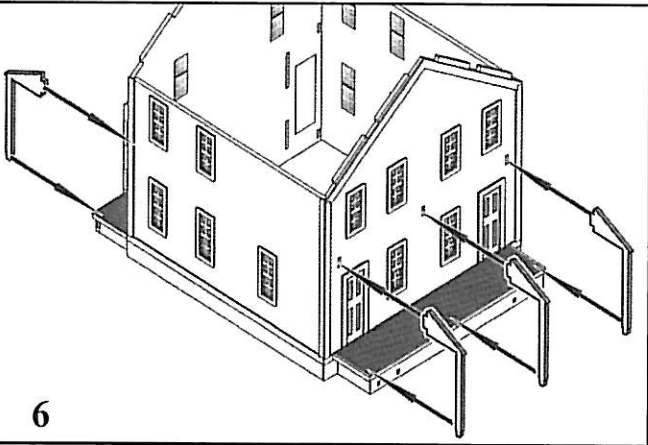

6

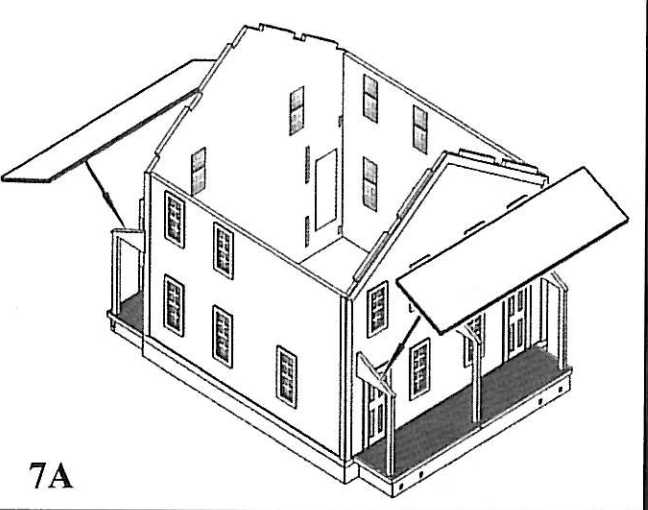

7A