

Trim:

7) Apply the trim one corner at a time. Note that each corner is made from two pieces, one a bit wider than the other. Apply the narrower section flush with the corner of the house, then apply the wider section so that it overlaps the edge of the narrower piece, giving a clean corner. Note that the lower side trim pieces are notched to go around the roof extensions and will fit below the roofline.

Stairs:

8) Glue the two stringers into the holes on the end of the porch. Now apply the treads by removing the backing from each one and pressing it onto the tops of the stringers as shown.

Front stairs and roof trim:


9A) Glue in the two stair stringers into the front wall of the house. Next, add the porch floor to the top as shown.

9B) Now glue the two porch support posts into the holes in the flooring and front wall.


9C) Add the upper valance and trim piece to the front of the posts by removing the backing and pressing them into place. Next, add the stair treads to the top of stringers.

9D) Fold the sub roof panel on the scribed line and glue it to the top of the front porch. Now apply the trim piece to the front edge of the sub roof panel.


Next, add the trim to the main roof edges as shown.

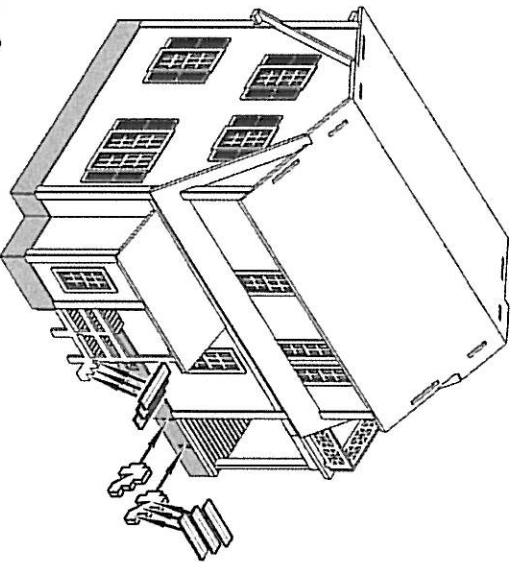


8

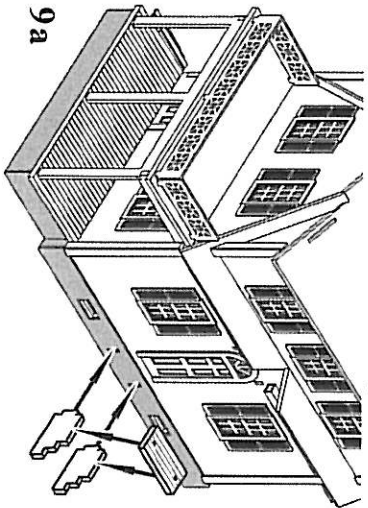


9a

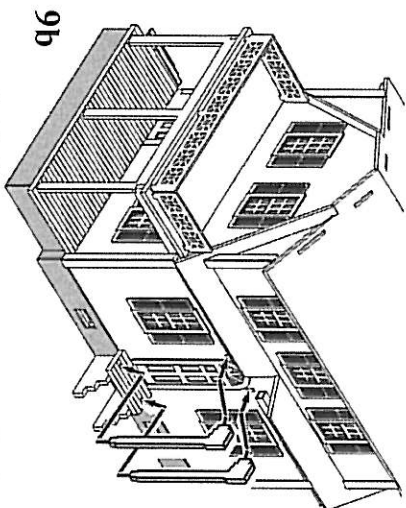

9b

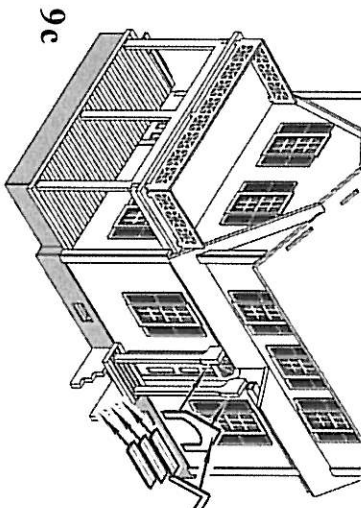

9c

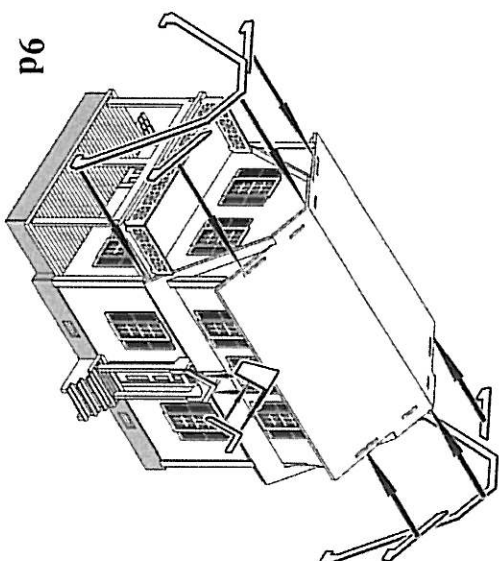

9d