

1a

Constructing the shell:

1A) Start with construction of the main house walls. Take the front wall, front entry wall and the connecting inner wall and glue them together as shown.

1B) Now glue the remaining exterior walls into place using the tabs to line them up properly. Make sure walls are square and set aside to dry.

1C) You can now glue the rear porch assembly to the back of the house. See illustrations for placement.

Windows:


2A) The parts for the windows are found on the window trim sheet. All of the windows are assembled in the same basic way. Note that some of the windows use special etched glazing. For these windows it is easiest to install the lower sash in

It is best to place the various window assemblies into their openings as they are done, see diagram 2B for placement. The peel-and-stick on the frame will be more than enough to hold them into place.


First remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Repeat with the upper sash and frame it being sure to keep the edge of the glazing flush with the top edge of the window. Now stick the lower sash into place on the frame. For a little interest and variety it is possible to position the lower sash in an open position. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place. Basement windows are glued into place from the inside of the house.

Front and rear doors:


2A) There are 3 door assemblies which are located on the front and side of the house. For the side door, Locate the inner and outer door panels, the glazing clear window and door frame piece on the trim sheet. Remove the peel-and-stick from the inner door panel and apply the window glazing to the back of it. Then attach the outer door panel to the inner panel. The front door assembles the same with the exception that there is only one panel.

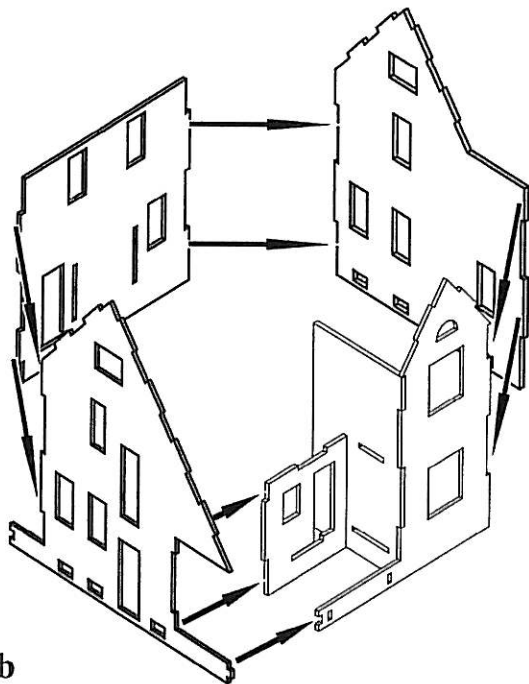

1b

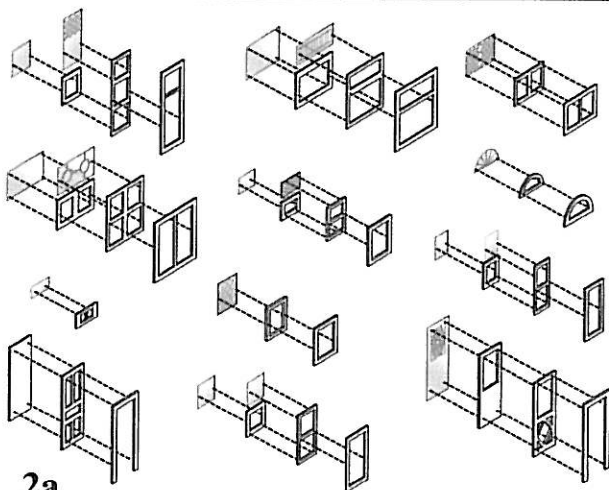

2a

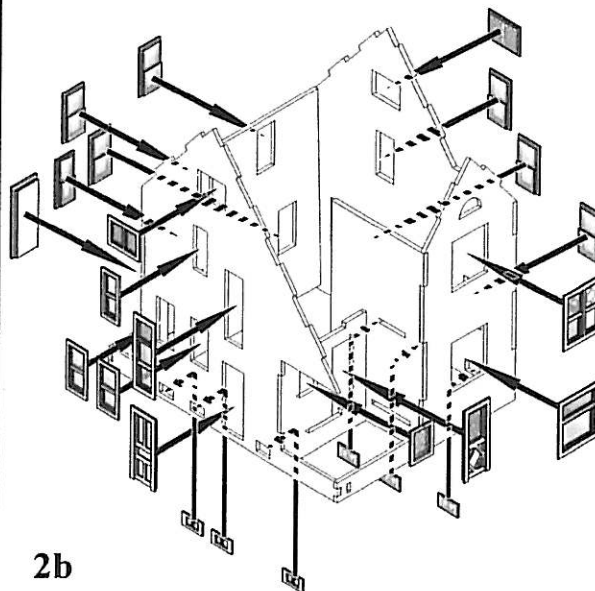

2b