


8b, 9

**Roof caps:**


10) Plastic striping is included in the kit and is used as roof caps. Cut to size and glue into place with plastic cement along the top peaks, inner edges and any other seam that may need covering of the roof panels. This trim can be painted the same as the roofing shingles and weathered accordingly. (See illustrations provided for placement of these trim pieces).

**Chimney and side moldings:**


11) A resin chimney has been supplied with your kit. This chimney piece can install by either cutting a hole in your subroofing and place the chimney inside or by sanding the base to the proper angle and attaching it with epoxy, contact cement or ACC. Use any extra plastic strips from your roof to trim out the bottom edges of the chimney as well. Now add the decorative eave molding pieces to the edges of your sub roof using the peel-and-stick backing.

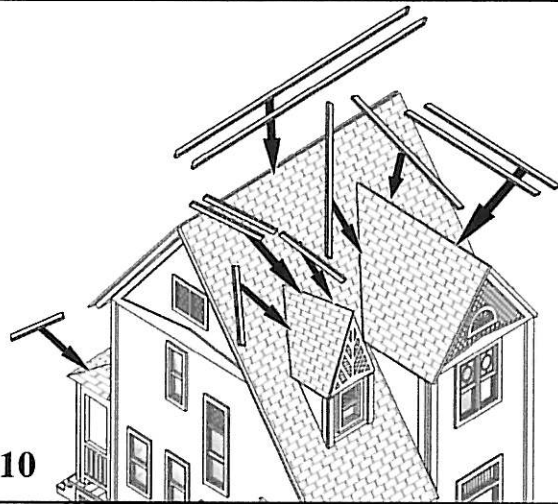


10

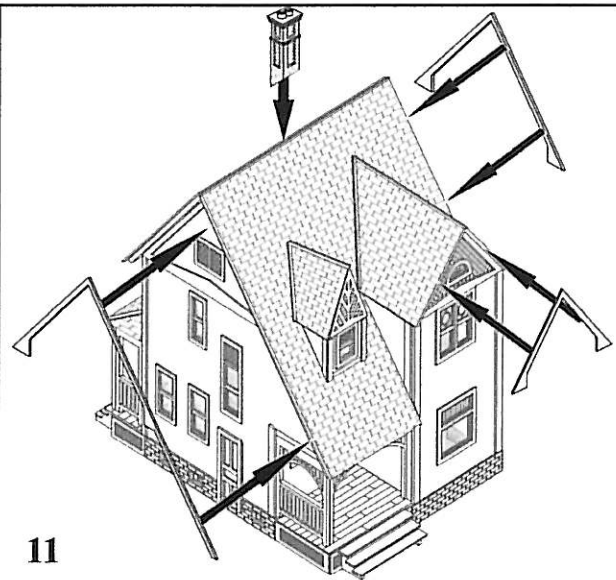


11

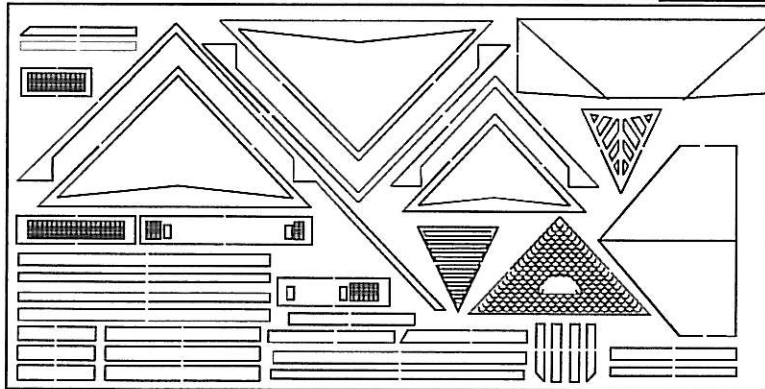

Trim Sheet

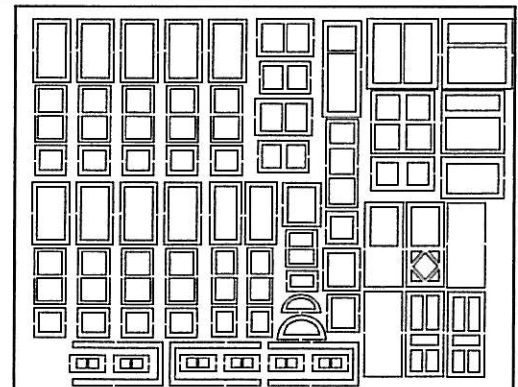


Window Trim Sheet

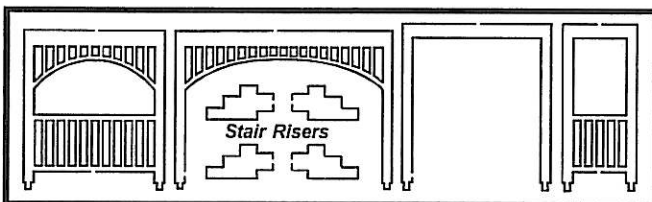

Front Porch Railings

Back Porch Railings

Stair Risers

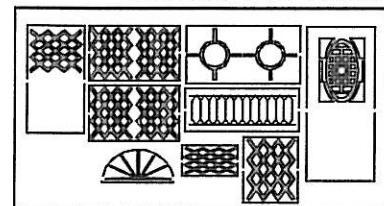

Etched Windows