



Front porch construction:

4) Porch pieces should be painted ahead of time for ease of painting as it will be difficult to get to all areas once it is installed. Locate the floor of the porch. This will have the woodwork carved into it already as well as holes for the porch railings as well. Using white glue, glue the porch railing into the proper hole in the porch flooring. Then place and glue the porch into the holes in the house. This will also allow the porch to dry straight. Once the porch is in place you can then install the upper roof panel. This will tab into the slots on the top of the two front walls.

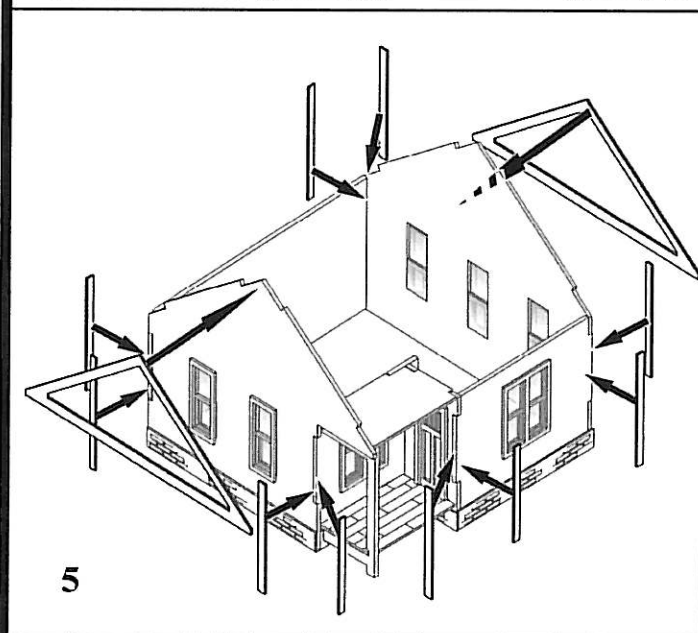

House trim:

5) Find the two large triangle shaped panels that make up the house's side trim. Press them into place by removing the peel-and-stick backing from them. Each panel will fit on the side even with the roofline. Now locate the houses side trim pieces on the trim sheet. Start with one corner at a time. Each corner will have 2 trim pieces. One a bit wider than the other. These will be applied by removing the peel-and-stick backing from each piece. Press the smaller one in place followed by the larger piece. The larger trim piece will cover over the edge of the first giving you a nice clean corner. Both pieces should be flush against the bottom of the upper trim pieces you applied previously. Repeat for all 5 sides of the house.

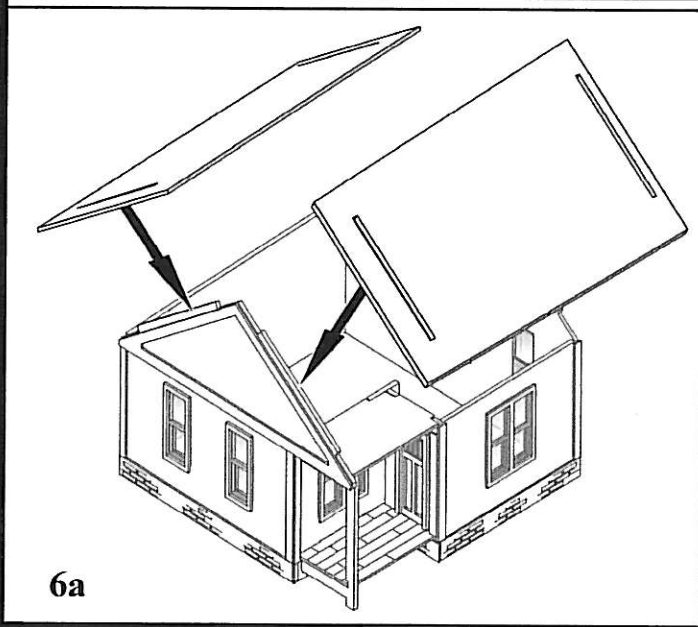

Sub Roofing & roofing trim:

6A) Using white glue, you may now add the front and rear sub roofing to your house kit. The roof panels will fit onto the tabs on each side of the house walls.

6B) Locate the 2 pieces of subroof trim and apply them into place by removing the peel-and-stick backing from them and pressing them onto the roof edges.

