


5b) The rear porch is constructed by first folding the arched lattice section (found on the lattice trim sheet) on the scribed line as shown. This will form the front and side wall of the porch. Glue this into the flooring and walls. Once the latticework is in place, install the flat sub-roof piece gluing it into the house side and to the tops of the lattice. Now add the peaked sub-roof, folding it and gluing it into place as shown.

House Sub-roof:

6) There are two pieces to the sub-roof. Test fit, and then glue the two pieces of sub-roofing into place as shown. Note that front panel overlaps the rear panel at the roof peak. Once in the sub-roof panels are in place, apply the two side trim pieces.

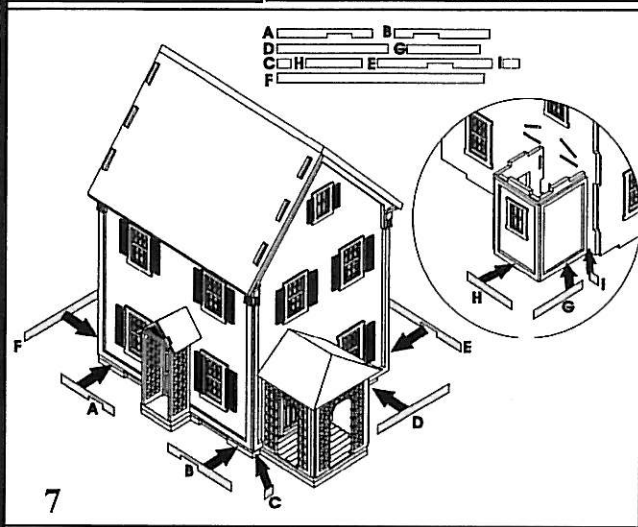


Foundation:

7) Peel-and-stick plastic stone sheets are provided to represent the foundation. Remove these from the sheet and apply them to the bottom of the siding just below the wall trim. Start with the sides of the house. These pieces should be flush with the bottom and the sides of both the walls. Now apply the back and front sections of foundation pieces. These pieces will overlap the corner at the end wall to create a tight corner (see drawings for locations of all foundation pieces.). If desired you can apply some liquid plastic cement to each of the corners. A couple of applications will melt the corners together and round the edge a bit. Paint the stone work with a light gray or brown followed by a wash of a darker gray or a black. You can top it off by dry brushing on some lighter highlights.

Roofing and chimney:

8) Once you have completed the above steps you can then install the plastic roofing provided with the kit. The roofing sections have the peel-and-stick backing on them. Simply peel the backing off the main roof section, fold on the scribed line and then place it on the sub-roof making sure the shingles overlap each side evenly. The porch roofing will install in the same manner. Peel the backing from the roof pieces and carefully place carefully onto the appropriate sections as shown. Roofing can be painted a medium to dark brown, red or green with a black wash and dry-brushed highlights.

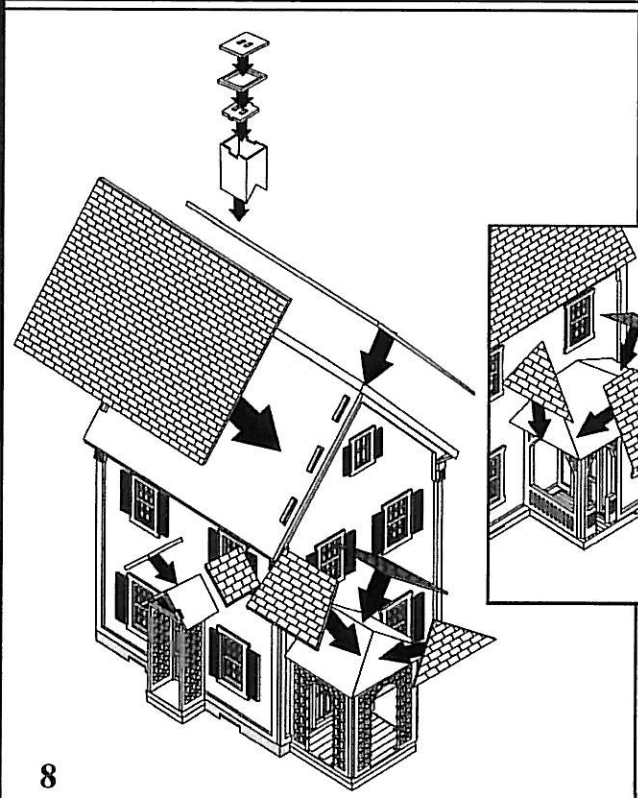

The large center chimney can now be applied. Remove the peel-and-stick chimney walls from the 1/64 trim sheet and fold on the scribed lines, gluing the tabbed ends together. Then apply the square ring section from the base sheet to the top of the chimney, followed by the chimney top. Chimney top can be painted to represent a concrete or stucco finish.