




3a

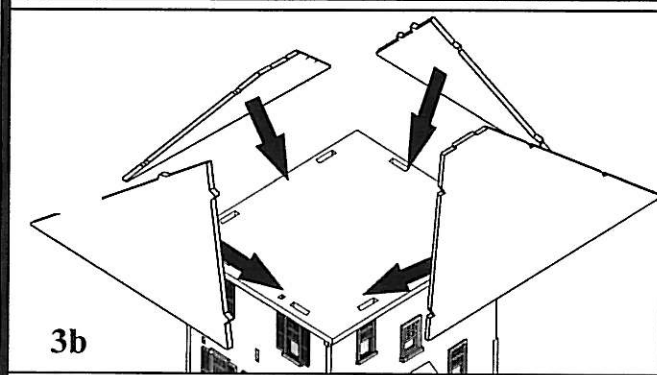

3b

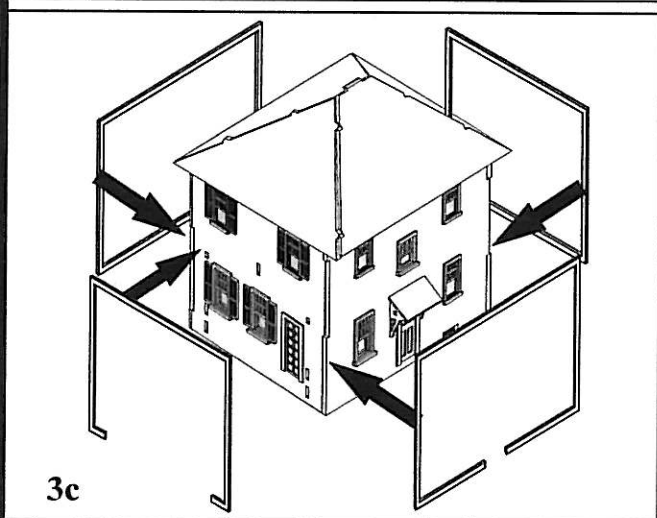

3c

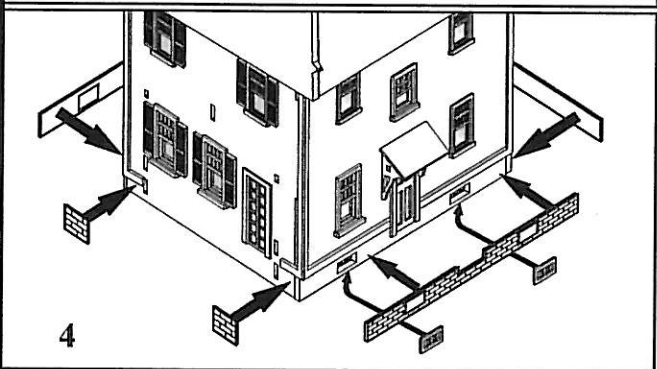

4

Sub-roof and house trim:

3a) Add the roof base to the top of the walls. Note that the roof base is keyed so that it will fit on the walls only one way. There is an extra small hole cut into this section to help you locate the side that will face the front of the house. The hole itself is not used for anything other than a guide. Just line up the tabs on the top of each wall to the corresponding holes in the roof base.

3b) Now find the four panels that make up the house's sub roof. Each roof panel has triangular tabs in different locations that will only match to the correct adjoining panel. Use small pieces of masking tape to hold the four roof sections together and run a bead of glue along the edges inside and out. Once the glue is dry you can remove the tape. The finished roof can then be glued into place on the sub roof, making sure it sits flat and has an even overlap on all four edges.

3c) The house trim is located on the 1/64 trim sheet. Start with the peel-and-stick trim for the sides of the house. (Note that one of the trim pieces for the side of the house as a section in it for where the side door is located. Make sure you have it on the proper side). Place the trim on the siding tight to the base of the sub roof making sure that the sides of the trim line up with the sides of the house. Once everything is even, press trim into place. Note that the bottom of the trim will be above the bottom of the house to allow for the foundation pieces that will be applied later.

Now apply the rear trim piece in the same manner as the side pieces. The top of the trim should sit up against the sub roof, and the sides of the trim should overlap the left and right side trim pieces to form a tight corner. Finally apply the front trim piece as you did the rear trim. Make sure you do not block any of the holes in the siding with the trim pieces or you will be unable to attach the porch later.

Foundation:

4) Starting with the back piece, apply the sections of peel-and-stick plastic stone sheets to the bottom of the siding just below the trim. The trim should be flush with both the bottom and the sides of the rear wall. Now apply the two side sections of foundation. Note that one side is notched for the side door and has basement windows, make sure you have the right sides on each before applying. Finally attach the two small sections on the front of the house on each side of the porch area. These pieces overlap the corner at the end wall to create a tight corner (see drawing). Paint the stone work gray or brown followed by a wash of light gray or white. You can top it off by dry brushing on some highlights. Once the stonework is dry add the basement windows as shown.