


Front porch construction:

5a) Paint the porch pieces ahead of time, as it will be difficult to get to all areas once they are installed. Install the lower porch frame first. Locate and glue the two porch side lower walls (found on the porch parts sheet) into the holes in the bottom front of the house. Next attach the front section to the faces of the two side walls. Now remove the porch from the 1/32 trim sheet and glue it to the top of the lower porch frame.

5b) Using white glue, glue the porch side railings into their proper holes in the porch floor and front wall. Next apply the front porch railing to the floor between the side railings you just installed. Finally, apply the lower section of sub roofing as shown using white glue. Make sure everything is straight and set aside to dry

5c) Next install the porch sub-roof porch. Start by gluing the small angled brace to the front of the house as shown. Now add the thin sub roofing (found on the 1/32 trim sheet). Note that the sub roof panel has two scribed lines. Fold the sides of sub roof back along these lines to give your roof the proper angle. Now add the trim work (found on the 1/64 trim sheet) around the top and bottom sections of the porch. The wider trim is used on the top and narrower trim will go along the top of the base just under the flooring. See diagram.

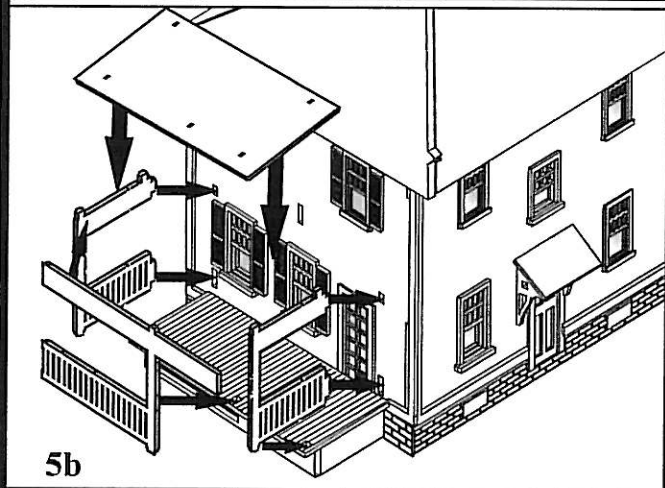

Roofing and front/side steps:

6a) We have provided peel and stick plastic roofing material. Simply peel the backing off the four upper roof sections and place them on the sub-roof joining them tightly at the center. The front porch roofing installs in the same manner. Apply the front piece first followed by the two side pieces. Finally, apply the small roofing panel to the side door awning. The roofing can be painted green, red, brown or gray. Follow the base coat with a wash of black and some lighter colored dry-brushed highlights.

