



LASER-ART STRUCTURES by BRANCHLINE TRAINS

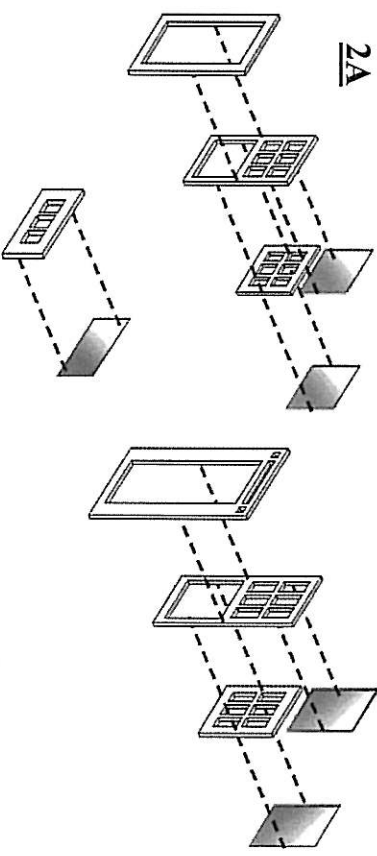

2A

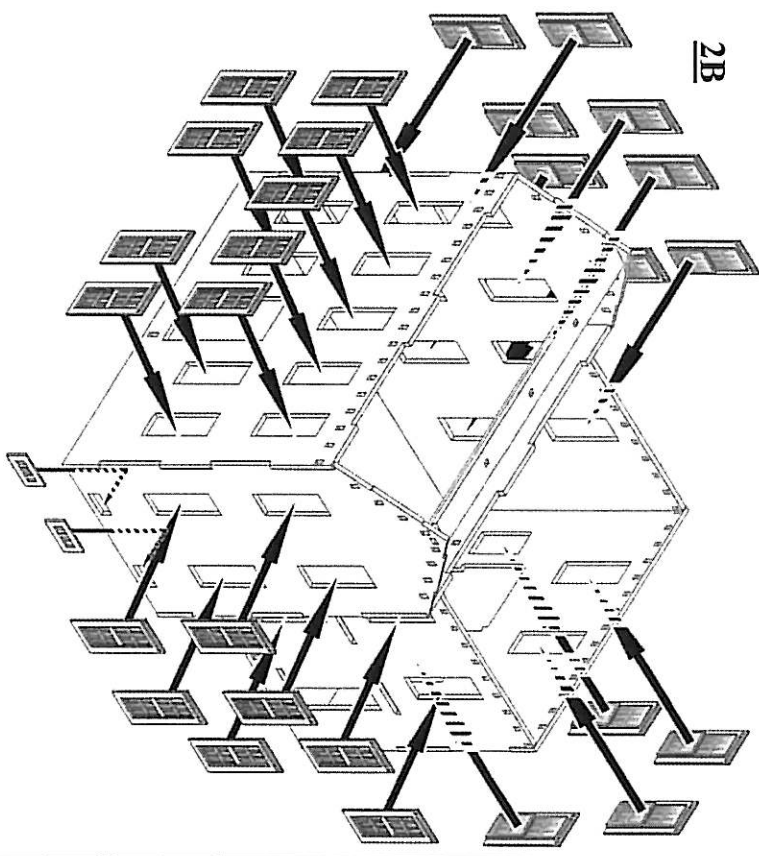

2B

Windows and shutters:

2A) The parts for the windows are found on the window trim sheet. It is easiest to paint the frames while they are still on the sheet, doing any required touch up later. It is best to install each window as it is built. See diagram **2B** for placement.

To make one of the standard windows, first remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Repeat with the upper sash and frame it being sure to keep the edge of the glazing flush with the top edge of the window. Now stick the lower sash into place on the frame. For a little interest and variety it is possible to position the lower sash in an open position. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place. The peel-and-stick on the frame will be more than enough to hold them into place. Note that all of windows in this kit are the same size with the exception of the two small kitchen windows on the back of the house and the basement windows. The basement windows are assembled by removing the peel-and-stick backing from the window and applying the glazing. The window assemblies are then glued to the insides of the openings at the bottom of the house.

2C) The window shutters are applied to the edges of the window frames by removing the peel-and-stick backing and pressing them firmly into place. Note that the window to the left of the kitchen door does not get shutters.

2C

