


**7A**

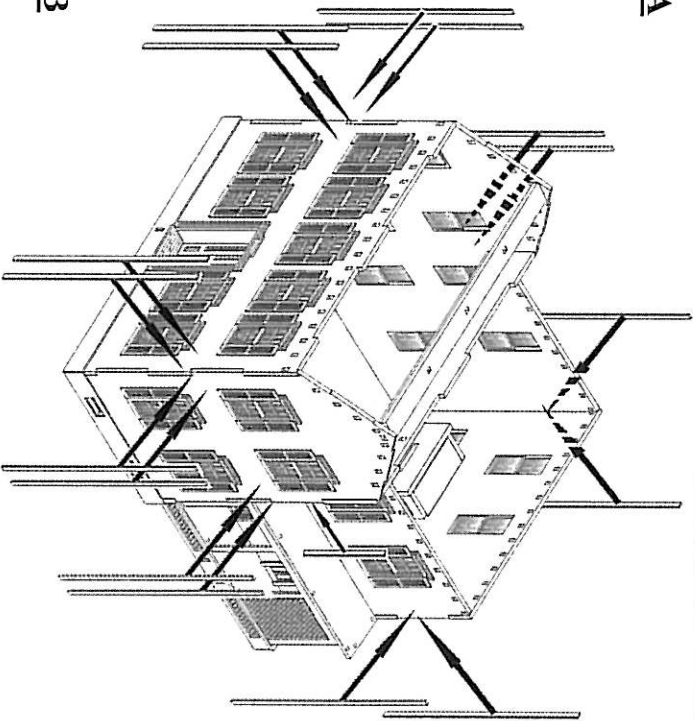

**Trim:**  
**7A)** The various corner trim pieces (found on trim sheet #1) can now be applied using their peel-and-stick backing. Note that each of the front and side walls have two pieces of trim per corner. The rear corners will have one piece of trim per corner. Refer to the diagram for placement.

**7B)** Now apply the upper trim along the top edges of the house. Note that these trim pieces have holes through them for the decorative supports and these will need to be aligned with the holes in the house walls.

**Decorative Trim Brackets:**

**8A)** Now its time to add all the little trim support brackets (found on trim sheet #2). This will be time consuming, as there are many small parts, so take your time. Note that there are two sizes of brackets. The larger ones are for the main house body and the smaller ones for the rear addition. Apply each by holding it with tweezers, dipping it into a small puddle of white glue, then inserting it into the hole in the upper trim. The eight supports that attach to the side corners of the house are not tabbed and need to be glued directly onto the trim pieces as shown.

**8A/B**

**7B**

