


LASER-ART STRUCTURES by BRANCHLINE TRAINS

**8B**

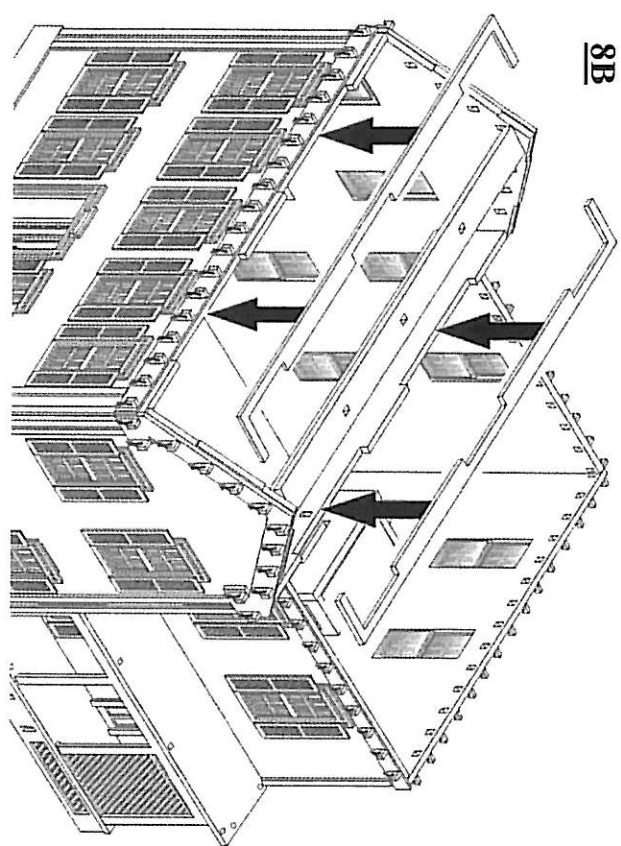


**8B)** You can now attach the top trim section. These tab into the tops of the house and rest upon the trim pieces you just installed. Glue these into place with white glue.

**8C)** Now we'll add the rest of the upper trim work. The wider soffit trim pieces for the main house attach to the front of trim brackets and the top trim sections installed in the last step. The narrower trim sections then apply to the front of the wider ones flush with the top edge to create a stepped effect (see diagram). The rear soffit trim pieces are single layer and are applied along the edges of the decorative trim brackets as shown.

**Sub roofing:**

**9A)** Glue the small triangular roof peak supports into the roof support as shown. Now carefully fold the sub roof along the scribed line and attach to the house using its peel-and-stick backing.

**9A**

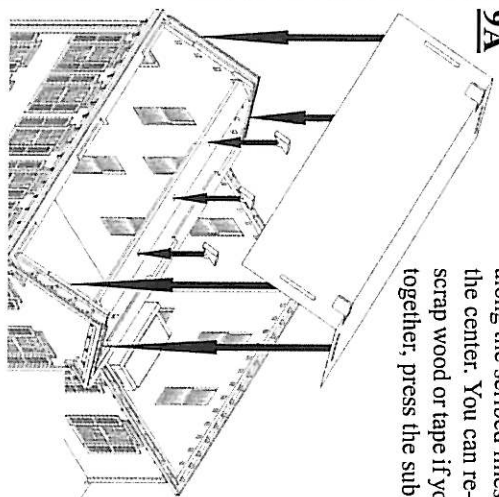

**9B)** Apply the rear sub roof same way. Fold carefully along the scribed lines so that the roof peak will join at the center. You can re-enforce the underside with some scrap wood or tape if you choose. Once folded and joined together, press the sub roof into place.

**9B**

