


LASER-ART STRUCTURES by BRANCHLINE TRAINS

10

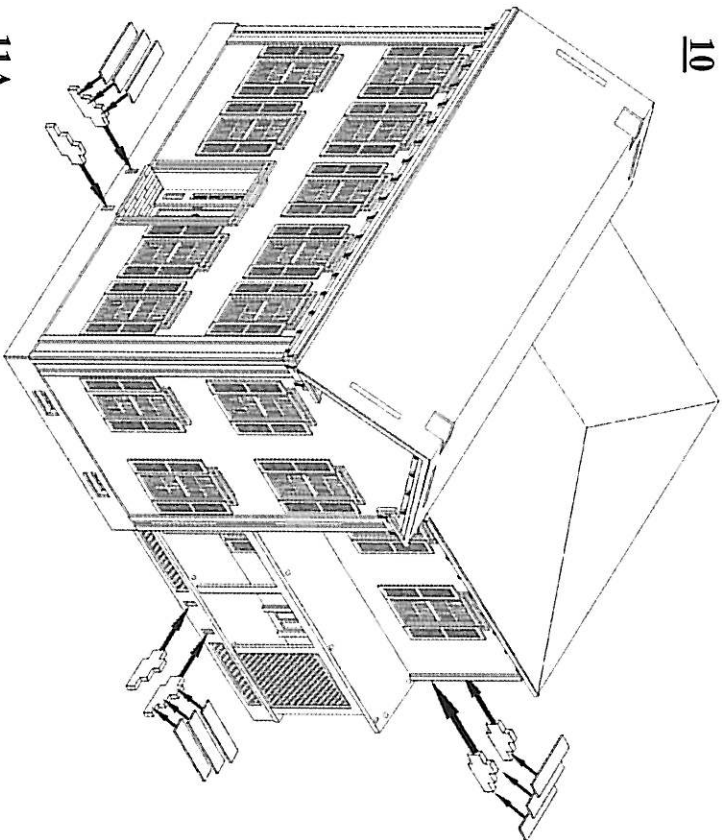

Front and rear steps:

10) Glue the six stair stringers into the slots in the front, side and rear porch area. Now add the peel and stick stair treads to them. Note that the narrower steps are used on the side porch.

Shingles and roof caps:


11A) Pre cut peel and stick plastic roof shingles are supplied for the main roof. Apply these by removing the peel-and-stick backing from them and pressing them into place, making sure they meet tightly at the top. Add the rear shingles by starting with the rear triangle shaped piece, followed by the side two.

Glue the small piece of black paper onto the top of the side porch to represent the tarpaper roofing here.

11B) Plastic strips are included in the kit for use as roof caps. Cut these to size and glue them into place with plastic cement along the roof peaks and seams (see diagram for placement).

Three sections of plastic rod are provided for use as down spouts. Two of these are for the front of the house and one for the side. Bend each section as shown, then cut to length and glue into place.

1B

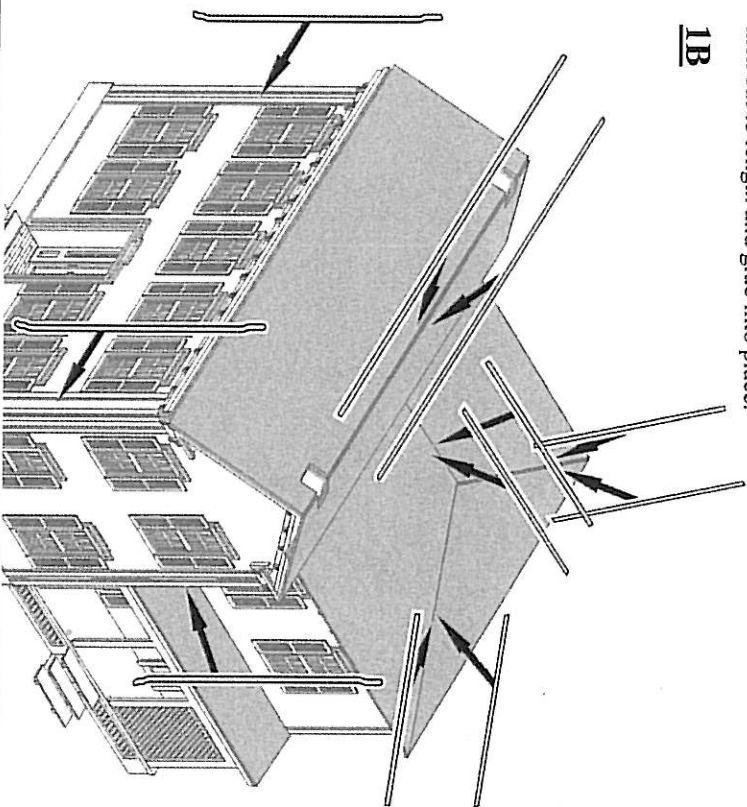

11A

