

1a

**Constructing the shell:**

1) Start construction of the main walls by gluing the front wall and the two side walls together as shown. Next glue the rear wall into place. Finally, glue the flat sub roof panel to the tabs on the tops of the wall sections. This will help keep the walls square as the glue dries. Once the glue has dried, paint the wall assemblies before you apply the rest of the parts.

**Windows and Doors:**


2A) The parts for these are on the window trim sheet. To construct the windows, first remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Now repeat with the upper sash and frame, ensuring the top edge of the glazing is flush with the top edge of the window. Next stick the lower sash into place on the frame. For a little interest and variety it is possible to position the lower sash in an open position. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place.

It is best to place the various window assemblies into their openings as they are done - see diagram 2b for locations. The peel-and-stick on the frame will be more than enough to hold them into place.


The two doors are constructed in a similar manner. For the side doors, locate the inner and outer door panels, the glazing and the doorframe piece on the trim sheet. Remove the peel-and-stick from the inner door panel and apply the window glazing to the back of it. Then attach the outer door panel to the inner panel.

The front door assembles in the same manner except there is only the single door panel.


Insert the doors into the appropriate openings in the wall sections using the peel-and-stick door trim applied to the outer portion of the house to hold the door in place.

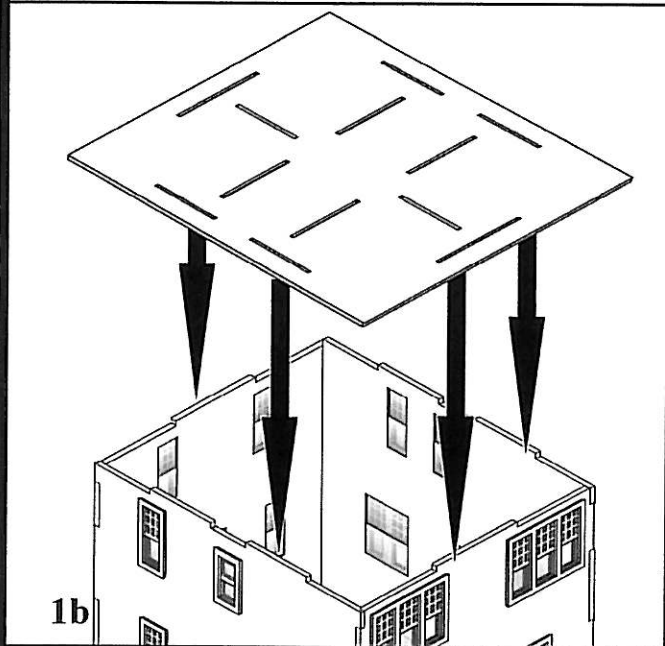

1b

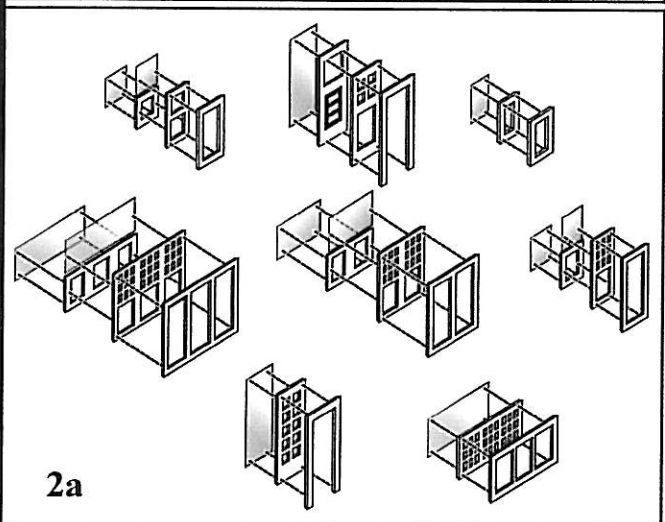

2a

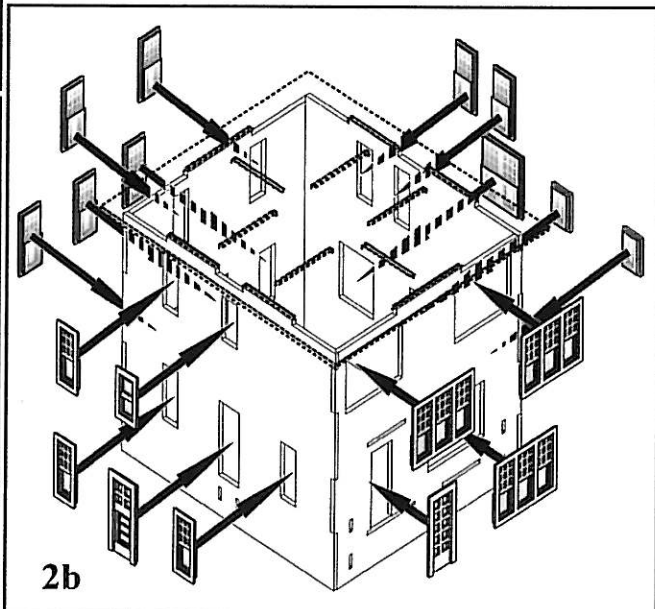

2b