


3

**Lower front porch construction:**

3) Glue the two lower porch side walls into the holes at the bottom of the front walls followed by the front porch wall. Next apply the porch flooring by gluing it (scribed side up) into the notch on the front of the house and to the tops of the porch side walls.

**Foundation:**

4) Peel-and-stick plastic stone sheets are provided to represent the foundation. Remove these from the sheet and apply them to the bottom of the siding just below the wall trim. Start with the sides of the house. These pieces should be flush with the lower edge the sides of both the wall sections. Now apply the rear and front foundation pieces as well as the ones around the front porch area. These pieces will overlap the corner at the ends to create a neat corner joint (see drawing). If desired you can apply some styrene cement to each of the corners. A couple of applications will melt the corners together and round the edge a bit.

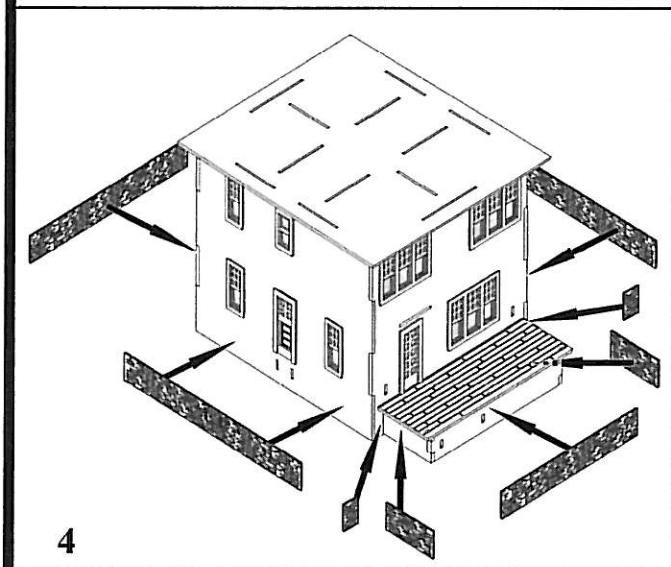

4


**House trim:**

5) Locate the house corner side trim pieces on the trim sheet. Each corner will have 2 trim pieces, one is wider than the other one. Doing one corner at a time remove the peel-and-stick backing from the narrow piece and apply flush to the edge of the corner. Now remove the peel-and-stick backing from the wider piece and apply it by overlapping the narrow piece at the corner. Repeat for the other corners of the house.


**Sub Roofing, Supports, and Upper Dormer:**

6A) Glue the sub roof supports together as shown, then glue them into the slots on the flat sub roof panel.


6B) Apply the sub roof panels by gluing them into the tabs on the tops of each roof support piece. Pieces should fit nice and snug. You should add an additional bead of glue along the seams after the panels are in place for added support.

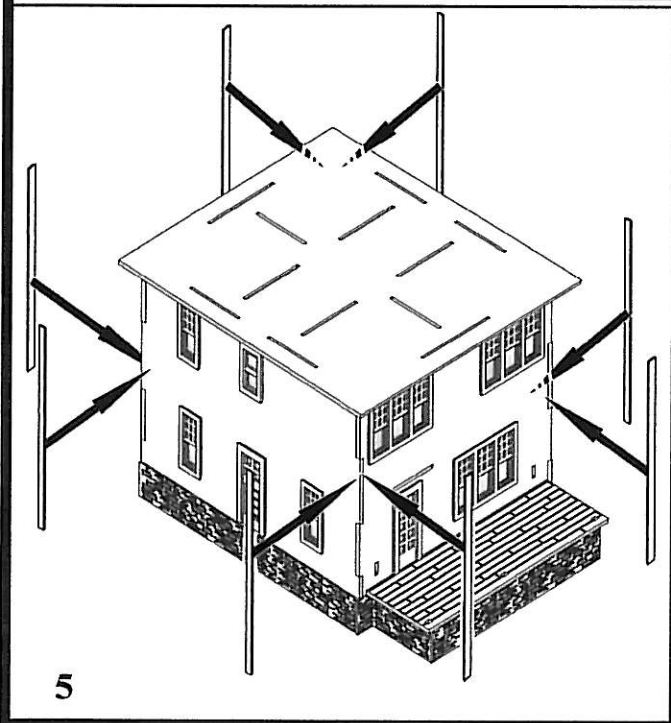

5

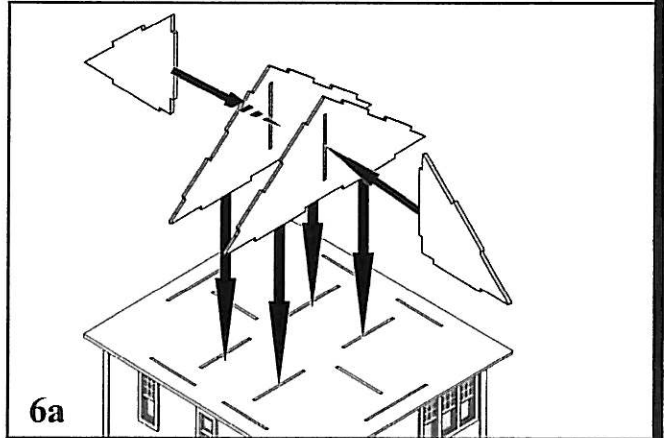

6a

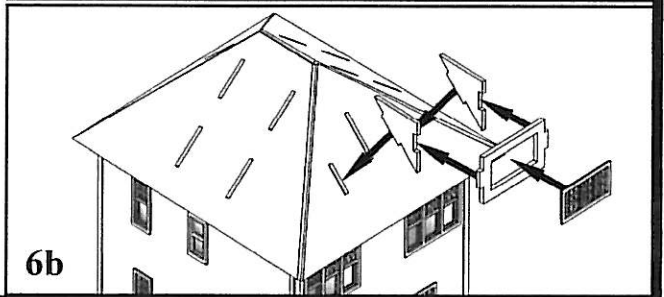

6b