




6C) The roof dormer is assembled by gluing the two side walls into the slots on the sub roof panel and then the front wall to the tabs in the side walls. Once glued together, place the appropriate window into the opening.

**Front and side porch construction:**


7) Paint the porch pieces before assembly since it will be difficult to get access to all areas once they are installed. Once the paint is dry glue the two side railings into the mounting holes in the porch and the slots front wall. The front railing can then be glued into place as shown. Finally, glue the porch sub roofing into the slot in the front wall. (see illustrations provided for placement).

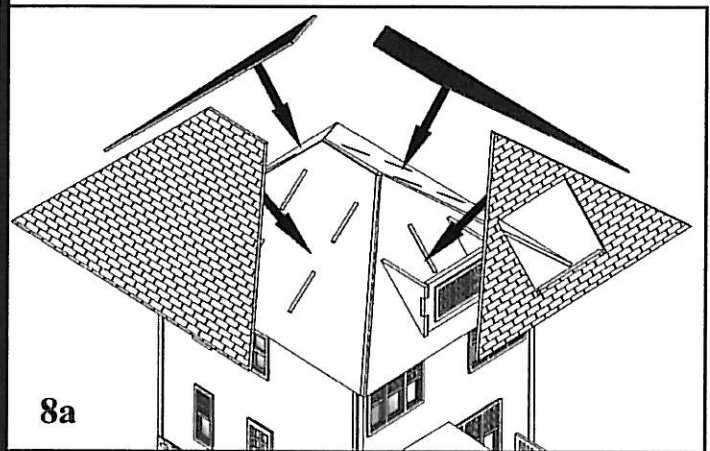

**Roof shingles:**

8A) Add the plastic roofing shingles to the sub roof panels by removing the peel-and-stick backing from each panel and press into place evenly. Start with the front roof panel for the house. Carefully place the shingle sheet over the front sub roof making sure that it fits tightly over the dormer window section (see diagram). Now apply the rear and two side panels and the rear panel keeping the joints as tight as possible.

8B) Now add the thin sub roof panels to the dormer and porch top. These pieces need to be folded slightly on the scribed lines and then applied to the dormer tops by using the peel-and-stick backing (see diagram).

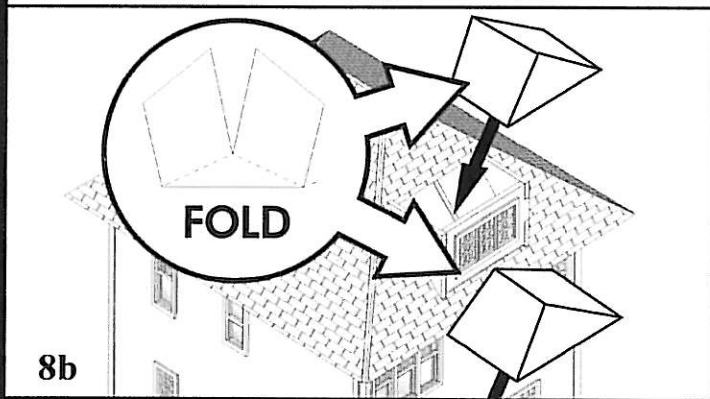

8C) Apply the trim pieces to the dormer in the same manner as the main house corner trim. Note that the dormer trim sections have an angled end - make sure the angles in the trim are placed on the proper sides so that the angles match the roof line.

Now apply the peel-and-stick shingle pieces to the dormers and porch as shown.

**Stairs:**

9) The front and side stairs are assembled using an identical process. First glue the two stair stringers into place. Now add the treads to the tops of each stringer by removing the peel-and-stick backing from the steps and locating them on the top surface of the stringers.

