


3

**Foundation:**

3) We have provided peel and stick plastic stone sheet to represent the stone foundation. Apply each piece by removing the peel-and-stick backing from it and pressing it onto the lower section of the house. Apply the side pieces first, followed by the front and rear. Note that the front and rear pieces have two holes cut into it for the stairs and basement window openings.

**Trim:**

4) Apply the trim one corner at a time following the diagram. Note that each corner consists of a wide and narrow piece. Apply the narrow section first, flush with the edge of the wall. Now apply the wider trim section so that it overlaps the edge of the narrower piece to form an even corner. Note that several of the trim boards are angled to match the rooflines. Refer to the diagram for the proper locations. Leave the trim off of the upper dormer for the moment.

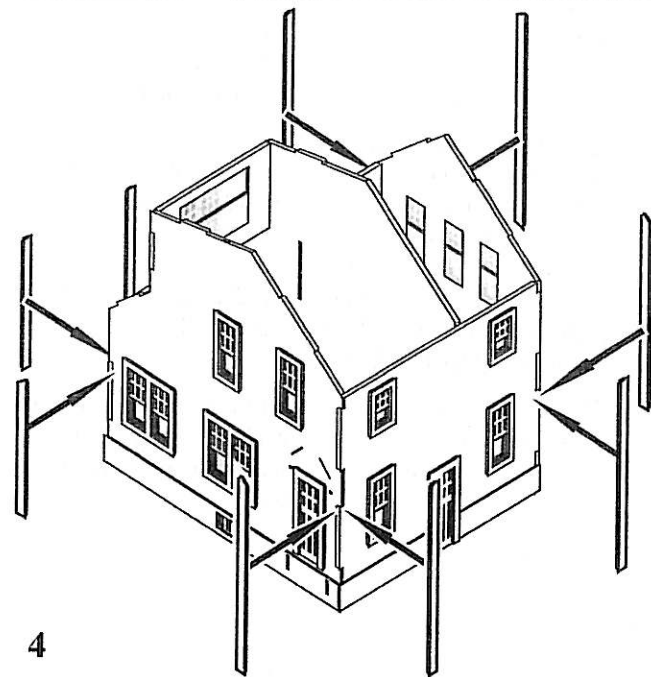

4


**Subroofing:**

5A) Glue the two large sub roof panels to the tabs on the tops of the walls as shown.

5B) Now add the trim boards to the upper dormer, then glue the sub roof panel to it as shown.



5A

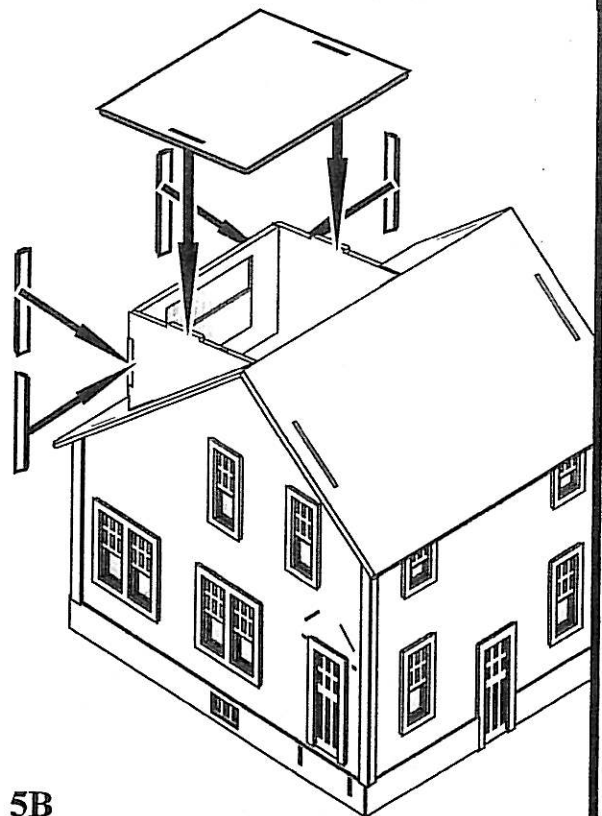

5B