


Porches:

6A) The front and rear porches assemble in the same manner. Start each by gluing the two side railings to the lower front porch wall. Now slide the flooring into the place under the side railings, the notches in the flooring will fit on each side of the posts. Next, glue the upper roof support to the top of the porch then add the peaked trim piece to it. One each assembly is dry, glue it into the holes in the front and rear walls.

6B) Fold the two porch roof sections on the scribed lines. Insert the tabs on the roof into the two slots in the wall and then press the roof down onto the tabs on the porch upper roof support.

Glue the two step stringers into the holes on the front of each porch. Remove the peel-and-stick backing from the steps and press each on onto the tops of the stringers as shown.

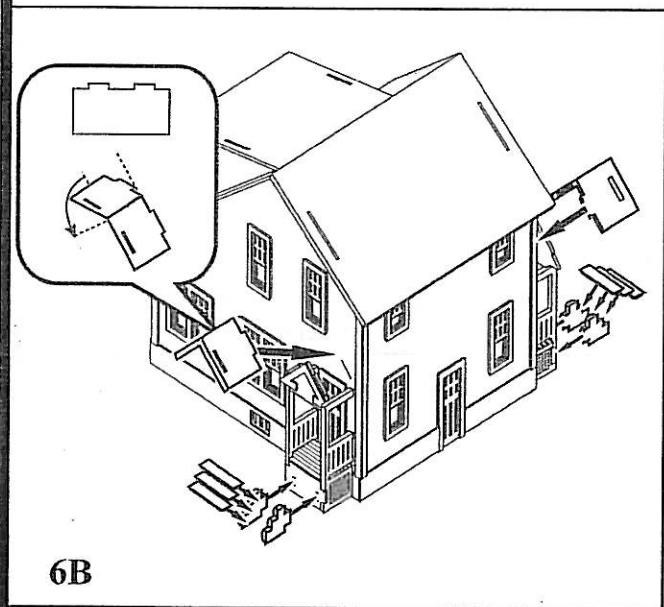

Roof shingles:

7) Remove the backing from each panel of plastic roof shingles and press into location as shown. The main roofing panels should meet cleanly at the top of the house. Apply the porch roofing in the same manner.

Roof caps and chimney:

8) A plastic styrene strip has been included with your kit to be cut and cemented to the peaks of each roof section to represent the roof caps. Once in place, the shingles can be painted. We've had the best results by starting with a darker color (gray, green or dark red would all be appropriate) then adding a wash of black and dry brushing lighter highlights.

The resin chimney can be anywhere you think looks best. To install the chimney either cut a hole in the subroofing or sand the bottom of the chimney to the proper angle and attach it to the roof with cement.

Your kit is now completed and ready for your layout. We hope you've enjoyed this kit.

