



Assemble the doors by first applying the clear window to the inner door using the peel-and-stick adhesive to hold it in place. Now attach the outer door panel to the inner panel. The smaller entry doors can be installed now by adding the door trim and pressing into place. Set the large door aside for now, we'll install it after the next step.

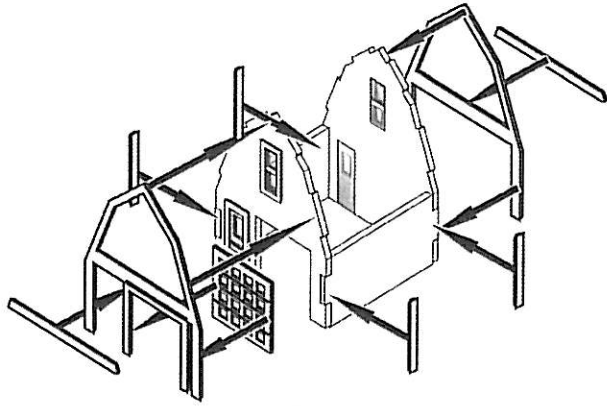


### Trim:

3) Remove the backing from the side sections of corner trim and press them into place flush with the edges of the side walls. Now attach the large front and rear trim pieces by lining them up with the roof line and pressing them into place. The front trim will overlap the side trim to give you a nice clean corner. Once the trim is in place insert your garage door into the frame from the inside of the garage. Complete the trim by adding the horizontal upper trim to the front and rear of the garage.

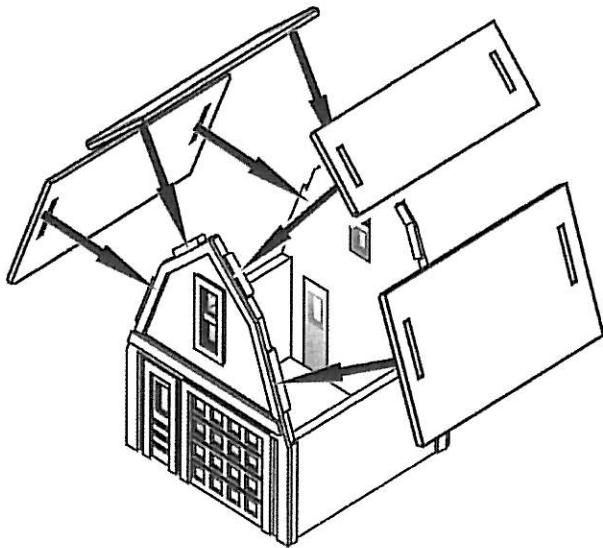


### Sub roof:

4) Glue the four sections of sub roof panels onto the tabs on the front and rear walls as shown.

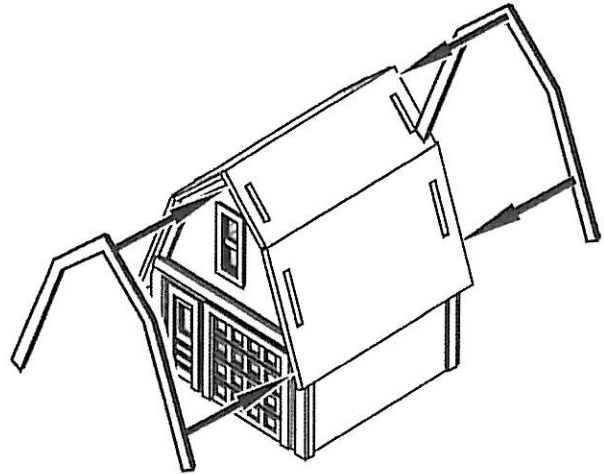

### Roof trim:

5) Attach the two roof-edge trim section to the ends of the sub roof panels.

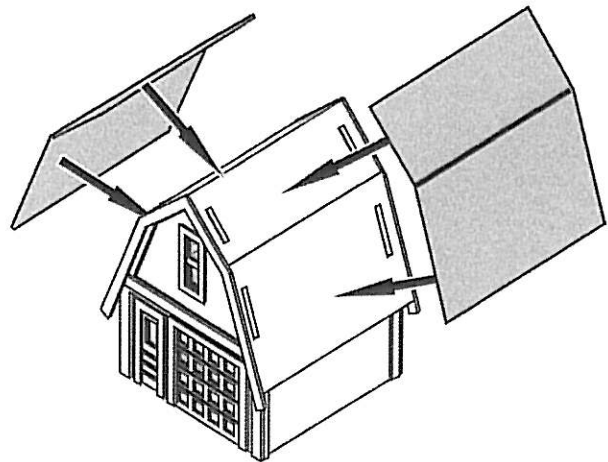

### Shingles:

6) Add the plastic shingles to the roofs by removing the backing from each piece and pressing it into location. The main roof shingle will need to be folded slightly on the scribed line before installation.

Your kit is now ready for installation on your layout.

### Branchline Trains

333 Park Ave.  
East Hartford, CT. 06108

For a full list of our products, see our web site at:

[www.branchline-trains.com](http://www.branchline-trains.com)

