

Trim:


4) Apply the trim one corner at a time following the diagram. Note that each corner consists of a wide and narrow piece. Apply the narrow section first, flush with the edge of the wall. Now apply the wider trim section so that it overlaps the edge of the narrower piece to form an even corner. Complete the trim by last step adding the upper trim boards to the front and rear of the larger wall trim pieces as shown.

Subroofing:

5) Glue on the two lower sub roof panels on to the house followed by the two upper panels as shown.

Roof Edge Trim

6) Apply the two roof end trim boards to the subroof edges as shown.

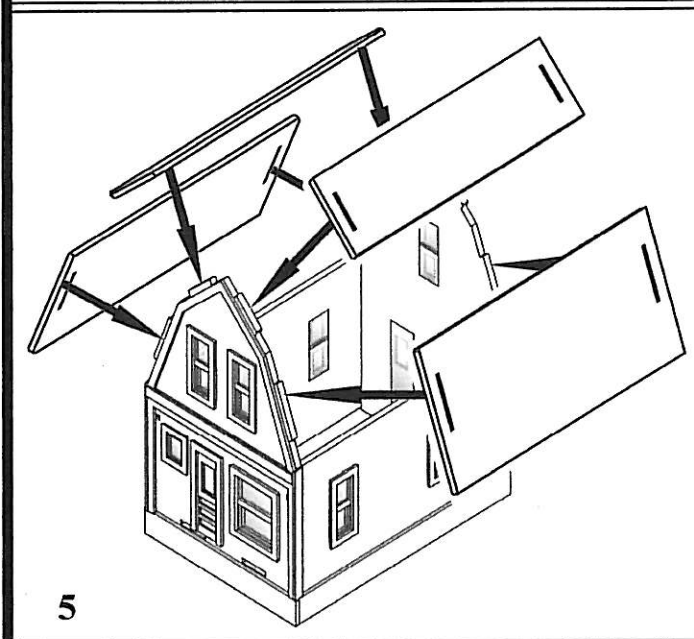

Front porch:

7) Remove the backing from the floor board section and apply it to the top of the lower porch flooring as shown. The two support legs can then be glued into place, then the whole assembly can be installed on to the front of the house by gluing the tabs into the slots on the front wall.

