

**Shingles:**


8) Glue the subroof panel to the front porch. Now add the plastic shingles to the roofs by removing the backing from each piece and pressing it into location. The main roof shingle will need to be folded slightly on the scribed line before installation.

**Stairs and chimney:**

9) Glue the front stair uprights into the slots under the front porch as shown. The rear stair uprights glue into the tabs in the foundation. Apply the stair treads by removing the backing from each and placing it on the uprights, making sure that they are centered. Note that the rear stairs have smaller step widths than the front.

A resin chimney has been supplied with your kit. The resin chimney can be anywhere you think looks best. To install the chimney either cut a hole in the subroofing or sand the bottom of the chimney to the proper angle and attach it to the roof with cement.

Your kit is now completed and ready for your layout. We hope you've enjoyed this kit

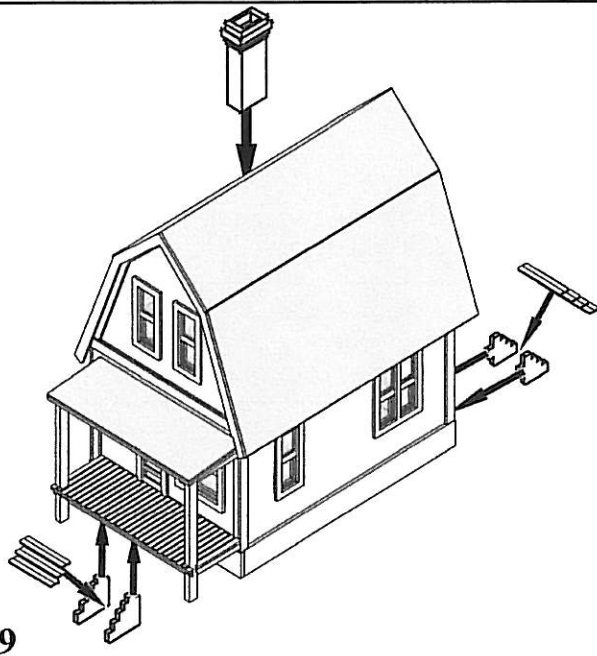

LASER-ART  
STRUCTURES by BRANCHLINE TRAINS