

Foundation:

3) Foundation pieces are installed by removing the peel-and-stick backing and pressing them into place. The pieces are numbered on the diagram to help determine the proper locations. Install the side pieces first, followed by the front and rear pieces. The front & rear pieces overlap the side to give you a nice clean corner. The openings in the foundation side walls should fit around the basement windows, giving them a recessed look.

Once its in place, you can paint the stonework with a gray or brown paint. Spend a few minutes and pick out some of the individual stones with lighter and darker shades of your base color. Once this is dry follow with a wash of light gray or black to represent the mortar between the stones (Light gray will make the foundation appear newer, black older). Finally dry brush some light gray or tan highlights into the stones.

Trim:

4) Apply the trim one corner at a time following the diagram. Note that each corner consists of a wide and narrow piece. Apply the narrow section first, flush with the edge of the wall. Now apply the wider trim section so that it overlaps the edge of the narrower piece to form an even corner.


Subroofing:

5A) Glue the two main sub roof panels down to the tabs on the wall tops.


5B) Now glue the two subroof panels on to the addition walls.

Steeple assembly:


6A) Remove the peel-and-stick backing from the flat steeple base and apply it to the top of the tower, aligning it on the tabs on the walls. Next, assemble the two inner roof supports slotting the two components into each other. Glue the completed steeple into the holes in the flat base.




3

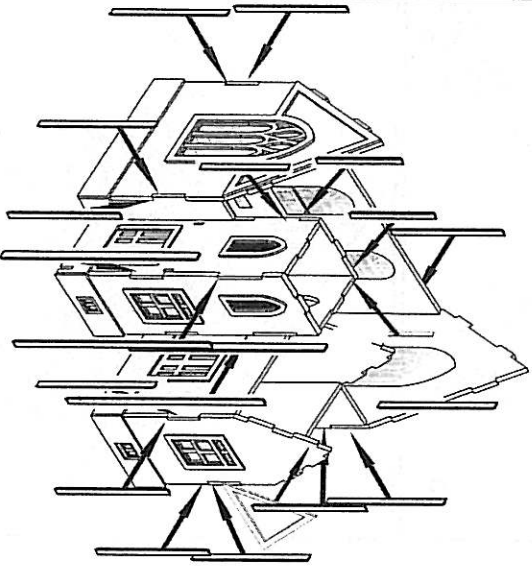


4

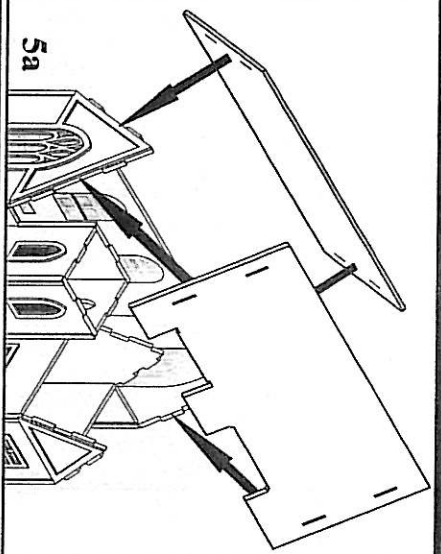

5a

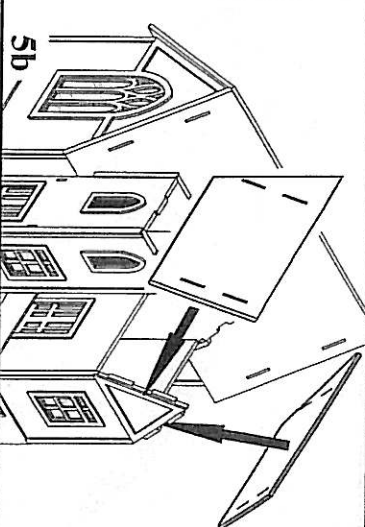

5b

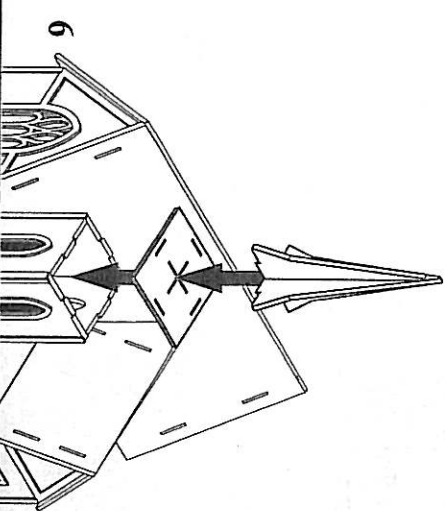

6