

6B) Remove the peel-and-stick backing from the subroof panels one at a time, fold them slightly on the scribed line, and press them onto the lower support sides as shown. Repeat for all four sides making sure the sections meet cleanly at all four corners.

Roofing:

7A) Remove the peel-and-stick backing from the two main plastic roofing panels and press them into place as shown. Make sure that the sections join cleanly at the edges.

7B) Now install the two roofing panels to the addition.

7C) Install the four lower roofing panels to the bottom edges of the steeple. Once all four are in place, apply the top four pointed roofing pieces, butting the bottom edge of each to the top of the lower panels.

Porches and stairs:



8A) Assemble the front and side porches by first gluing the lower supports together as shown. Now glue the flooring in place and glue the center stair supports into place. Now glue the small trim panels to the inside of each section to close off the opening under the decking. Apply the peel and stick stair treads, pressing each one gently into place. Once dry, glue each assembly to the Church as shown.

8B) Now add the subroof section and the plastic roofing to the front porch.


Roof caps:

9) Plastic styrene strips have been included with your kit to represent the roof caps and flashing. Cement these along the edges of the roofing panels as shown. Once installed and dry, the roofing can be painted and weathered as desired.


Your kit is now completed and ready to display. We hope you've enjoyed this kit. If you have any problems or comments, please contact us.

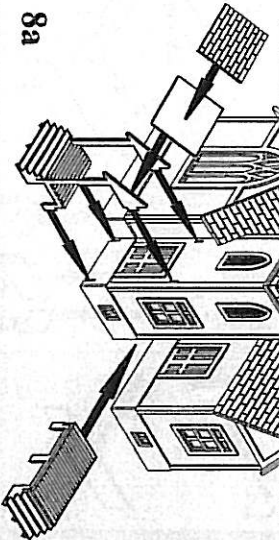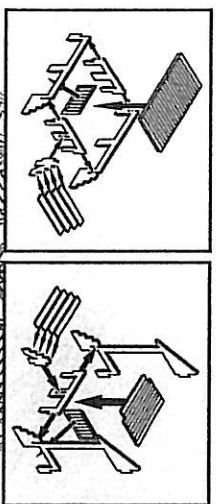


8a

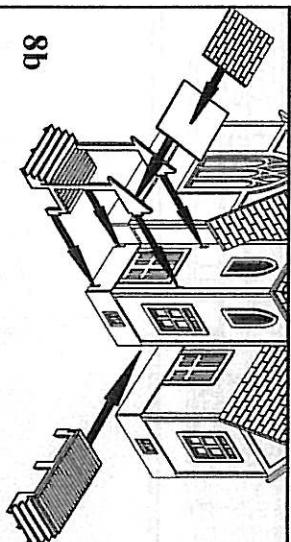


8b

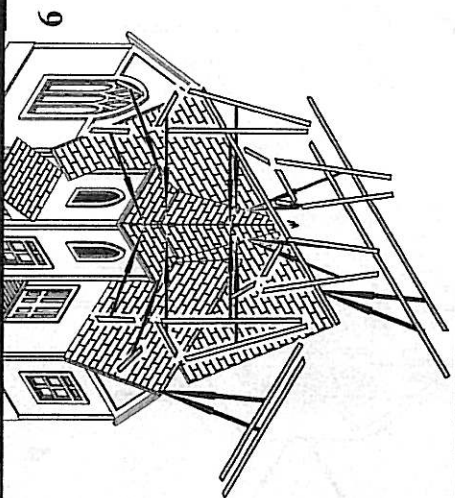

9

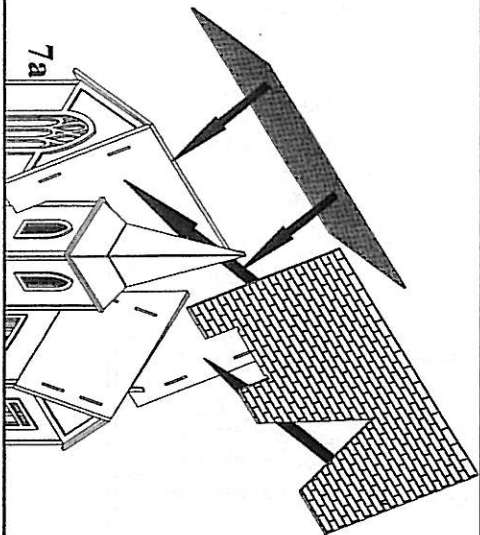

7a

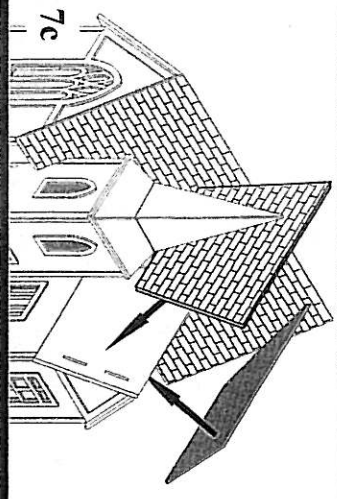

7c