


2B) To assemble the inner foyer windows remove the backing from each window and press the a section of pre-cut clear glazing onto it. Now remove the backing from window frame and press the window assembly onto the frame, making sure that it is centered. Press the window frame into the opening on the side wall panel. Once both windows/ side walls are assembled, remove the backing from the side wall sections and press them onto the inner side walls as shown.

2C) Add the front window section by removing the backing and pressing it onto the front of the building making sure that it is centered. It should overlap the two inner side walls you just installed.

2D) The front windows will assemble the same way as the previous windows did. Press each window assembly into the openings as shown.

2E) Now add the trim to the facade starting with the two double columns. Remove the backing and press each one onto the ends of the building as shown. Next add the trim to the inner and outer corners overlapping each section at the corner.

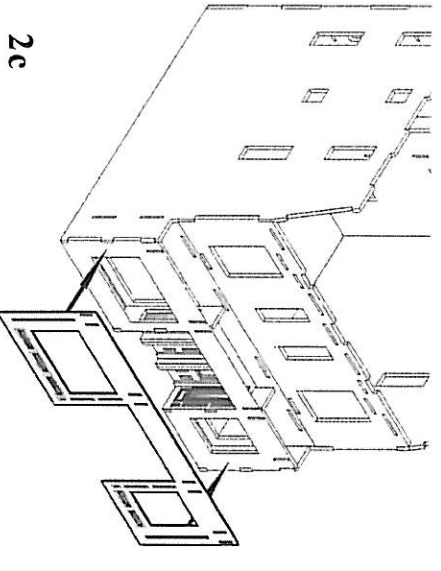

**Column trim, brackets and sub roofing:**  
 3A) Remove the backing from the column side panels and press them onto the columns as shown. The front panel will overlap the side panels. The scribed lines on these panels will help you align the trim in the next step.

3B) You can now add the column trim by removing the backing and pressing the side trim pieces into place, followed by the front ones which will overlap the side pieces. (These are very small and can be left off if desired).

3C) Assemble the decorative roof brackets by applying the peel-and-stick side onto the center bracket as shown. Glue the completed brackets into the slots along the top edge of the facade as shown.

