


LASER-ART STRUCTURES by BRANCHLINE TRAINS


Before you begin:

We recommend that you read through the instructions as well as the picture diagrams before you begin each step. This will help prevent any assembly mistakes. Dry fitting pieces before you glue will help as well.

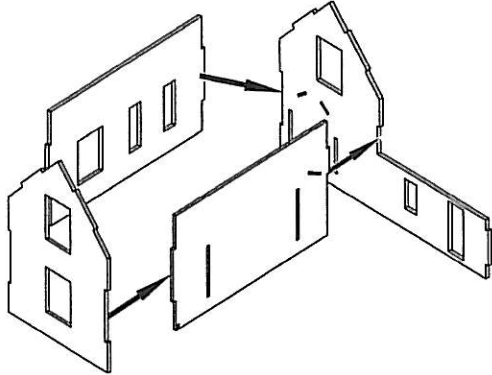


Constructing the shell:

1A) Start construction by gluing the two side walls to the front wall. Next, glue the rear wall into place. Check that all of the corners are square and set aside to dry.

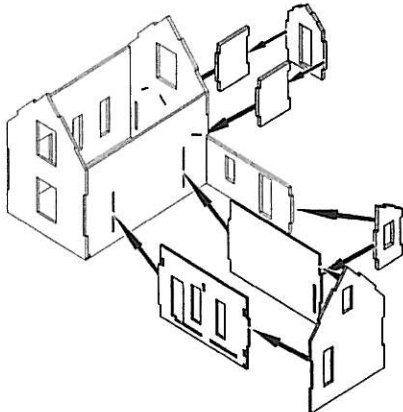


1B) Now tab the front and rear walls into the section you just constructed. Once in place, add the side wall and the small connecting wall to the rear. Finally, add the small rear entrance to the back of the house as shown. Once the glue is dry, paint the walls before proceeding.

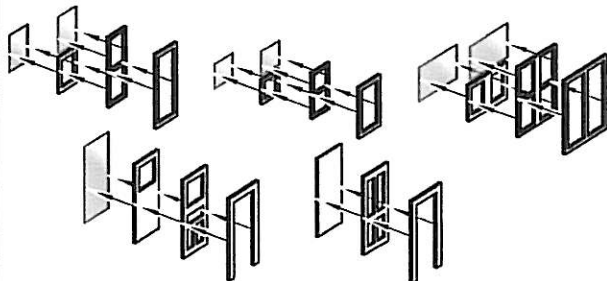

2A) To assemble the windows, first remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Now do the same with the upper sash and frame making sure to keep the edge of


the glazing flush with the top edge of the frame. Now stick the lower sash into place on the frame. Note that it is possible to position the lower sash in an open position if desired. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place.

It is best to place the various window assemblies into their openings as they are done (see diagram below for placement). The peel-and-stick on the frame will be more than enough to hold them into place.

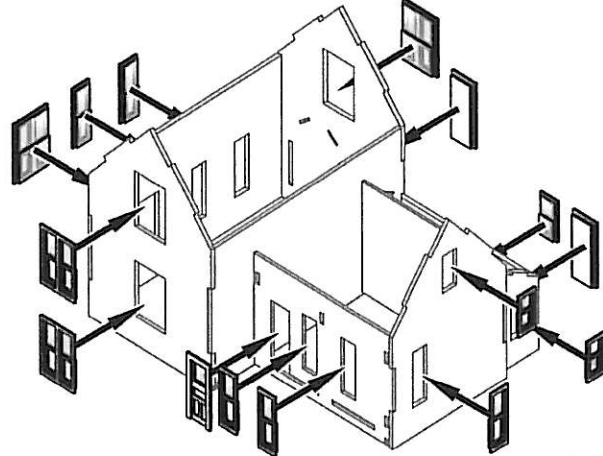

To assemble the front door remove the peel-and-stick from the inner door panel and apply the window glazing to the back of it. Now attach the outer door panel to the inner panel. Now apply the door frame to the door, keeping the door centered side to side in the frame and flush with the bottom edge. Insert the completed door into the door opening using the peel and stick backing on the door frame to hold it in place.

The other two doors do not use the clear glazing but are assembled in the same manner.

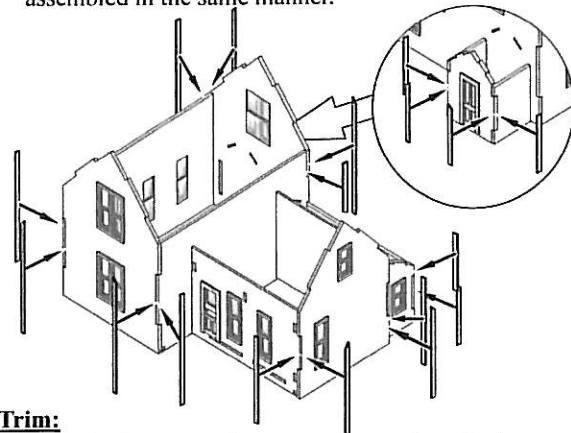

Trim:

3) Apply the corner trim one corner at a time. Each corner will have 2 trim pieces, one a bit wider than the other. Apply them using the peel-and-stick adhesive, installing the narrow section first flush with the corner then adding the wider section so that it overlaps the narrow in at the corner. This will give you a nice clean corner.