


LASER-ART STRUCTURES by BRANCHLINE TRAINS

1A

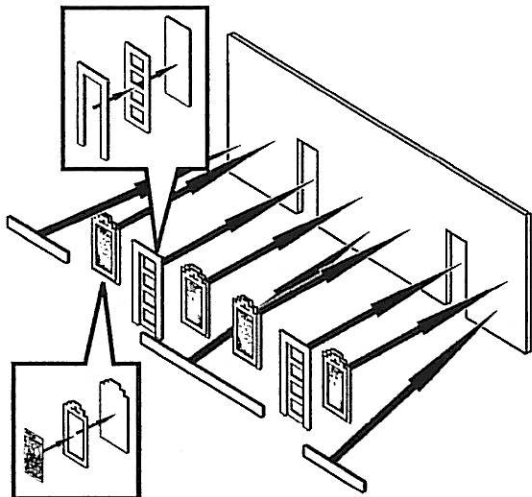

Constructing the shell:

1A) Paint the inner lobby wall and trim components before assembly. Assemble the two doors first by removing the peel-and-stick backing from the outer door panel and applying it to the inner panel. Now press the door into the frame, then press the completed door into the wall opening.


Add the baseboard wall trim along the base of the wall between as shown.

There are eight poster frames included in your kit. Two of these are for the outside of the building, the remainder can be placed inside (or the location of your choice). Apply the peel and stick outer frame onto the large back section of the poster frame making sure it is centered. We have included a sheet of various vintage movie posters for you to add to your theater. Cut the posters of your choice and glue it into the center of the frame. Now remove the backing from the poster frame and press it onto the wall.

1B) Paint the inside of the lobby walls before assembling the walls since these areas will be visible through the front windows.

The theater walls are all designed to tab into each other. Start by gluing the front and rear walls to the side walls to form a box. Make sure the corners are square, then set aside to dry. Now glue the inner lobby wall into the front of the theater. There is no specific location for this wall, place it where you think it looks best. You may want to add a couple scraps of wood behind the lobby wall to provide a little extra support (see diagram). Finally, glue the roof support into place. This piece tabs into the top of the side walls and should sit against the front wall.

1B

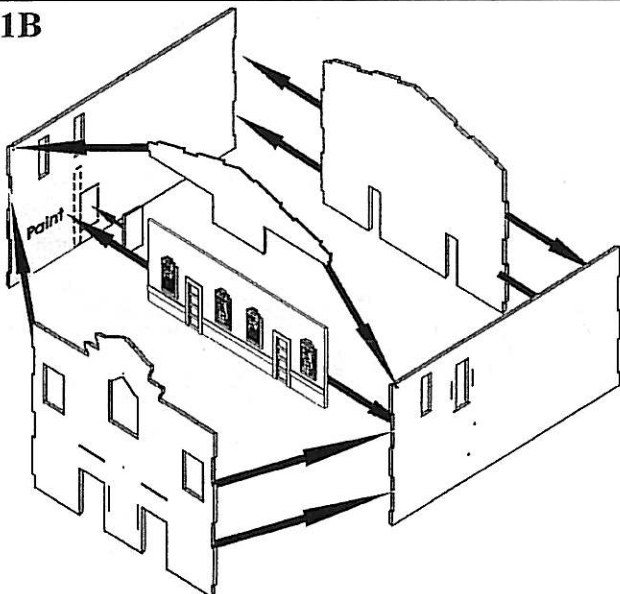

Windows and doors:

2) To assemble the windows, first remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Now do the same with the upper sash and frame making sure to keep the edge of the glazing flush with the top edge of the frame. Now stick the lower sash into place on the frame. Note that it is possible to position the lower sash in an open position if desired. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place.

It is best to place the window assemblies into their openings as they are done. See the diagram for placement. The peel-and-stick on the frame will be enough to hold them into place.

The doors are built up from layers. Start by removing the backing from the inner door panel and applying the window glazing to it. Now apply the trim panel to the inner door panel. Finally, mount the outer frame section to the door, then insert the completed door into the wall opening.

2

