

3

**Subroof:**


3) The 1/32 plywood subroofing can now be installed by removing the peel-and-stick backing and carefully applying the panels so that they meet at the center of the roof. There will be a slight seam, this will be filled in with a trim piece in step 7.

**Roof trim:**

4) The two sections of peel-and-stick decorative trim pieces are applied to the outer edges of the sub roof panels as shown. They should be applied flush with the top edge of the roof.

**Support beams:**

5) The two support beams fit into the small notches on your subroof trim pieces. These beams run across the front and rear of the structure - see the diagram for placement. Once the beams are in place, apply the two decorative support brackets into place - these glue into the holes in the front of the structure.

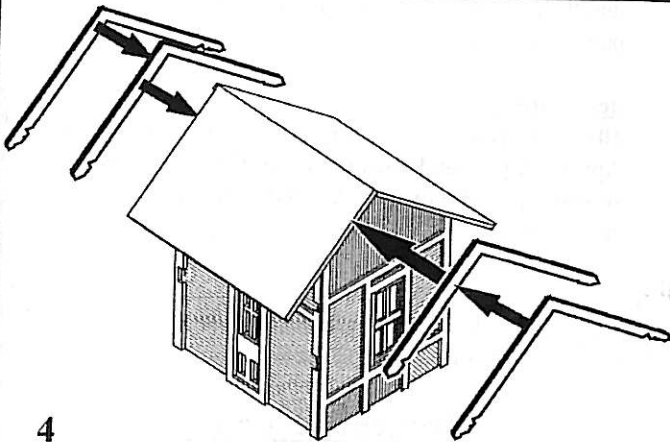



4

**Roof shingles:**

6) Remove the peel-and-stick backing from the plastic roof shingles and apply them to the sub roofing. Leave a small gap at the top so the decorative roof trim will fit.

**Roof trim and run off board:**

7) Glue the decorative roof trim between your roof panels as shown. Now glue the snow fence to the top of the shingle roof on the front of the structure.

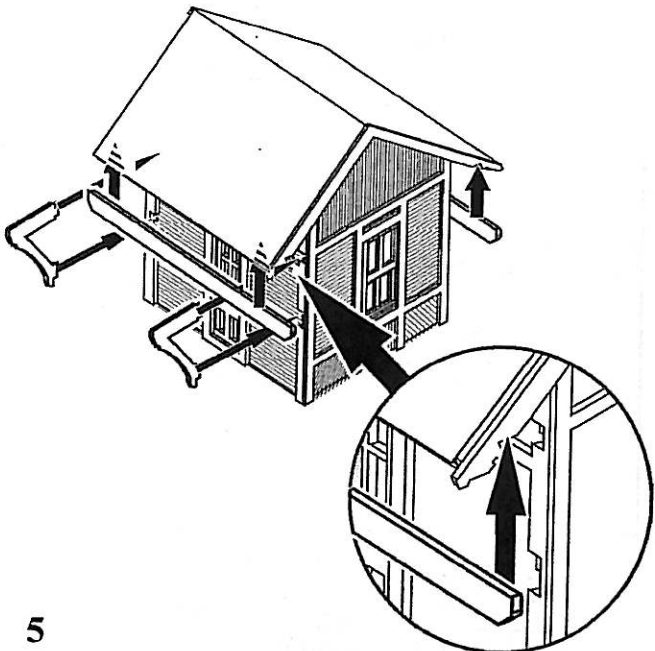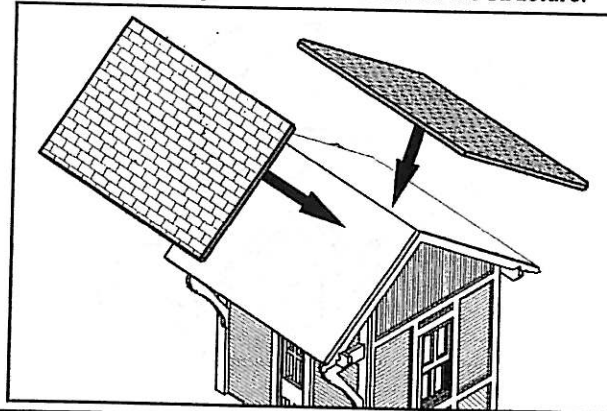

5

