


LASER-ART STRUCTURES by BRANCHLINE TRAINS

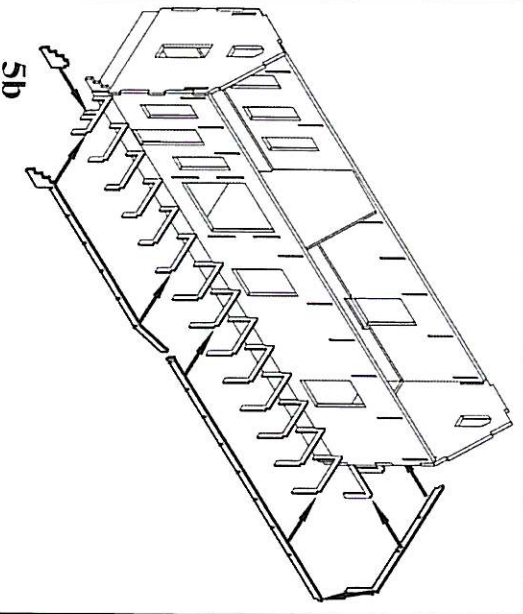

5C) Apply the L-shaped section of decking, fitting it snugly up against the walls of the station. Now glue down the front section - you will need to fold it slightly to create the ramp.

Bay window:

6) The bay window side walls tab into the slots on the front wall. Glue these into place first, then glue the bay front wall into place. Check that the corners are square and set aside to dry.

Windows and doors:

7) To assemble the windows, first remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Now do the same with the upper sash and frame making sure to keep the edge of the glazing flush with the top edge of the frame. Now stick the lower sash into place on the frame. Note that it is possible to position the lower sash in an open position if desired. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place.

It is best to place the window assemblies into their openings as they are done. See diagram 3 for placement. The peel-and-stick on the frame will be enough to hold them into place.

The doors are also built up from layers. Remove the backing from the outer door trim panel and apply it to the backing panel as shown. Now mount the outer frame to the door then insert the completed door into the wall opening.

Trim:

8) Apply the trim one corner at a time following the diagram. Note that each corner consists of a wide and narrow piece. Apply the narrow section first, flush with the edge of the wall. Now apply the wider trim section so that it overlaps the edge of the narrower piece to form an even corner.

