

Foundation:
6) Apply the foundation pieces by removing the backing and pressing each section into place. Again, the side pieces should overlap the front and rear ones.

Subroofing:
7) Glue the two subroof panels into place. Note that each side will line up on the tabs on the garages wall sections.

Sub roof trim:
8) Remove the backing from the two roof end trim pieces and press them into place on the sides of the sub roof panels you just installed.

Roof shingles:


9) Remove the backing from each of the plastic roof shingle panels and press them onto the sub roof as shown. They join tightly at the top.

10) A small section of styrene strip has been included for a roof cap. Cut this into two pieces and cement these along the top edge of your roof. Your kit is now completed and ready to for your layout. We hope you've enjoyed this kit. If you have any problems or comments, please contact us.


For a full list of our products, see our web site at

www.branchline-trains.com


7

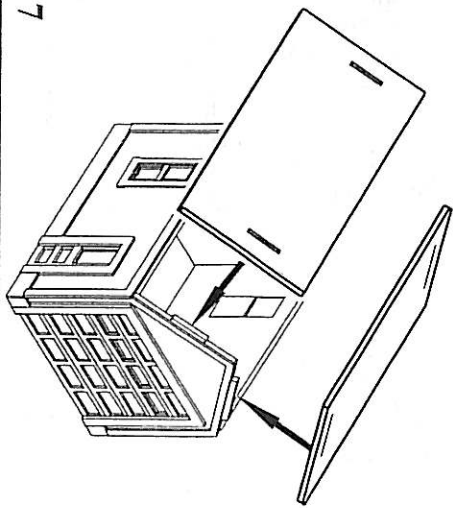

9

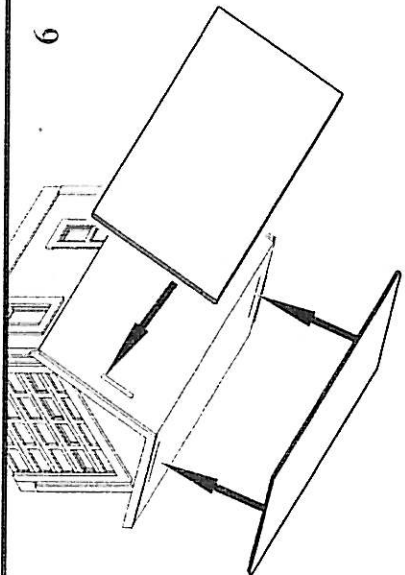

10

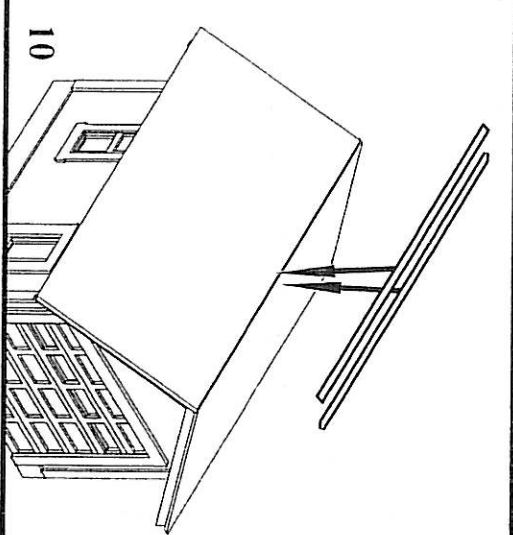

8

