


LASER-ART STRUCTURES by BRANCHLINE TRAINS

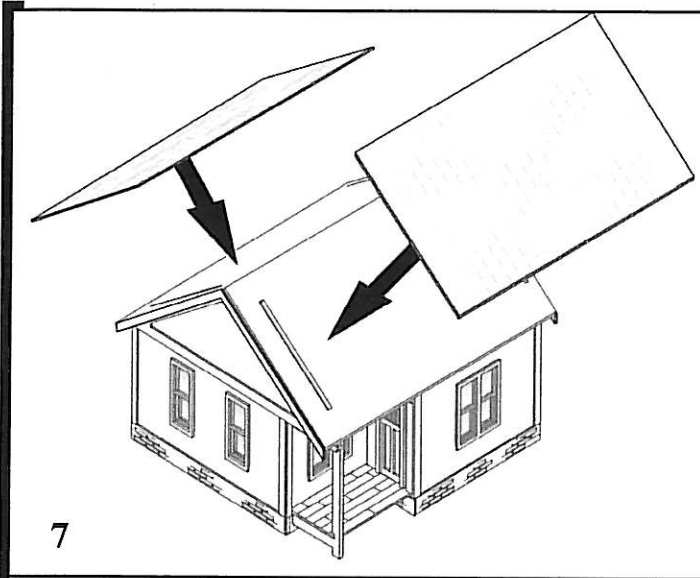


Roof shingles:

7) Plastic roofing can then be added to the subroof panels. Remove the peel-and-stick backing from each panel and press into place evenly. Start with the front roof panel for the house followed by the rear. The panels join together at the top to form a tight joint.

Stairs:


8) The front and rear stairs both assemble the same. Glue the two stair stringers into place followed by adding the steps to the tops of each one. Steps will apply by removing the peel-and-stick backing from them. The front stringers have small scribed lines to show you where they will glue in under the front porch. See illustrations.

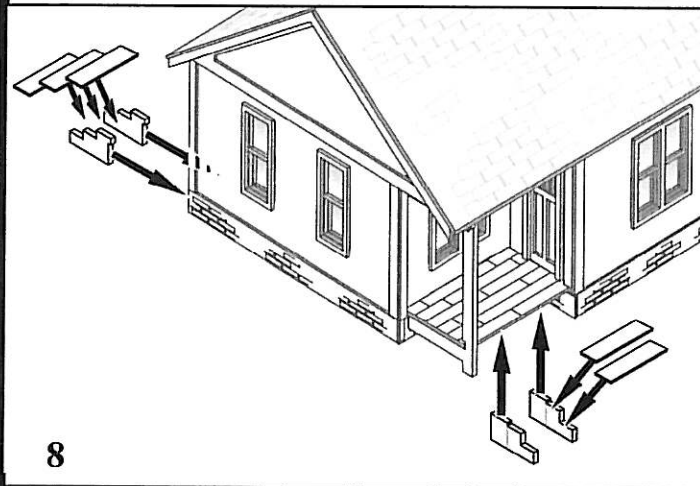

Roof caps and chimney:

9A) Plastic striping is included in the kit and is used as roof caps. Cut to size and glue into place with plastic cement along the top peaks of the roof panels. See illustrations provided.

9B) A resin chimney has been supplied with your kit. The resin chimney can be located on the top rear center of the roof. You can either cut a hole in your subroofing and place the chimney inside or sand the proper angle into the bottom of it and attach with cement. You can use any extra plastic strips from your roof to trim out the bottom edges of the chimney as well.

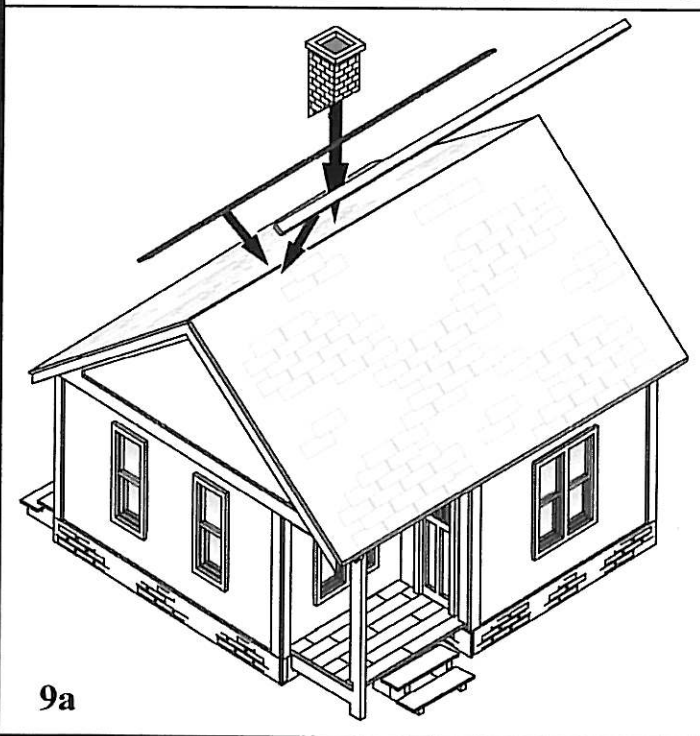

Your kit is now completed and ready for your layout. We hope you've enjoyed this kit. If you have any problems or comments, please contact us at:

Branchline Trains

333 Park Ave. East Hartford, CT. 06108

(800) 289-4000

For a full list of our products, see our web site at

www.branchline-trains.com

