



LASER-ART STRUCTURES by BRANCHLINE TRAINS

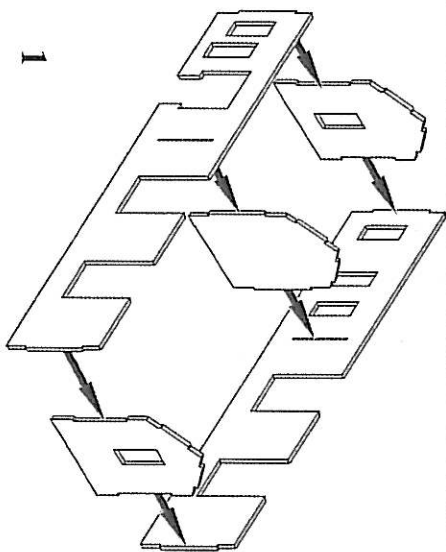


Painting and weathering tips (continued):
 We recommend painting the inner window sashes (see parts diagram) tuscan red or similar and the trim dark green before assembling the windows or applying the trim. The walls can be painted after the siding is applied in step 2.

Before you begin:
 We recommend that you read through the instructions and look at the picture diagrams before you begin each step. This will help prevent any assembly mistakes. Dry fitting pieces before you glue will help as well.

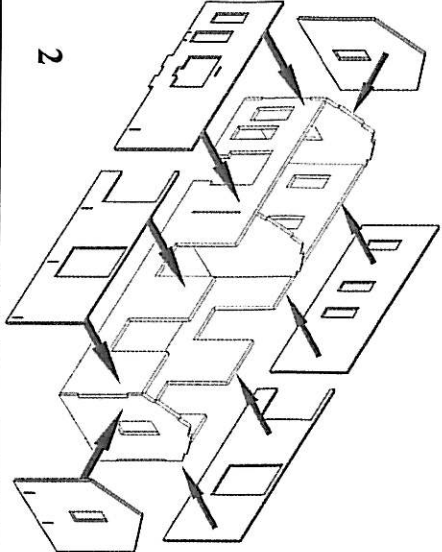

Constructing the inner shell:
 1) Start construction by gluing the center support wall into the slots in the front inner wall. Now glue the rear wall and two end walls into place. Note that the right hand end wall (closer to you in the diagram) has a higher window than the left hand wall. Make sure these are properly located. Make sure that the walls are square, then set aside to dry.

Outer wall panels:
 2) The board and batten siding sections have peel-and-stick adhesive on them. Locate and test fit the parts before removing the peel-and-stick backing. Start with the left front wall section (the one with the door and large window opening) applying it to the core with the left edge flush with the end wall and the top edge flush with the top of the core wall (there should be a gap at the bottom of the siding to accommodate the foundation applied in step 3). Now add the right hand section, checking that it too is flush with the right end wall. Now add the two rear walls, again keeping them flush with the ends. Finally, add the two end walls making sure they line up with the window opening in the core.

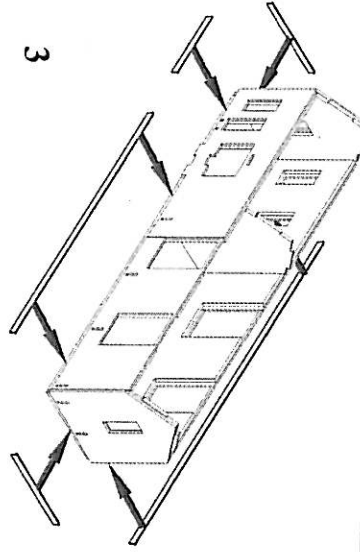

Paint the walls now before applying the trim or windows.

Foundations:
 3) Remove the backing from the foundation stonework sections and press them onto the exposed lower sections of the core walls as shown. The end sections will overlap the front and rear sections to give a clean corner. Paint the stonework using either gray or brown paint. You can also take a few minutes and pick out individual stones in a slightly lighter or darker shade of the same color for some extra detail. When this dries paint add a wash of black or cream to bring out the mortar lines, then dry-brush a lighter color on top to bring out the highlights on the stonework.

Windows and doors:
 4) To assemble the windows, first remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Now do the same with the upper sash and frame making sure to keep the edge of the glazing flush with the top edge of the sash. Now stick the lower sash into place on the upper sash. Note that it is possible to position the lower sash in an open position if desired. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place. Finally, add the upper trim rail on the larger windows and the waiting room door as shown.

