

4

**Lower windows and doors:**


4) To assemble the windows, first remove the peel-and-stick from the lower sash and apply a section of clear window glazing to it. Now do the same with the upper sash and frame making sure to keep the edge of the glazing flush with the top edge of the frame. Now stick the lower sash into place on the frame. Note that it is possible to position the lower sash in an open position if desired. Now take the window frame and remove the peel-and-stick from it. Center the window sash assembly into the frame and press into place. It is best to place the window assemblies into their openings as they are done. See the diagram for placement. The peel-and-stick on the frame will be enough to hold them into place.

There are two door designs used on this kit, one has a window above, the other is plain. They both are assembled in a similar manner. First applying the clear glazing (where appropriate) to the inner door panel using the peel-and-stick adhesive to hold it in place. Now attach the outer door panel to the inner panel. Insert the door into its opening and then apply the peel-and-stick frame trim to the outside to hold the door in place.



**Tower wall and window trim:**

5A) Apply the four sections of trim starting with the sides. Remove the backing from each piece and press it evenly onto the sides of the tower. Follow with the front and rear pieces. Note that the front and rear sections overlap the edges of the others for a neat corner.

5B) Now assemble the tower windows. These go together in the same manner as the other windows. Assemble each section as shown and press them into the frames from the inside of the tower.

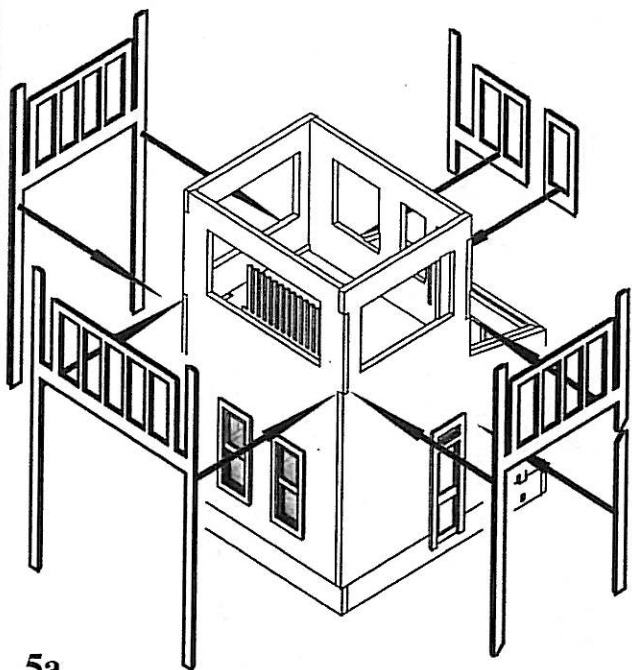

5a

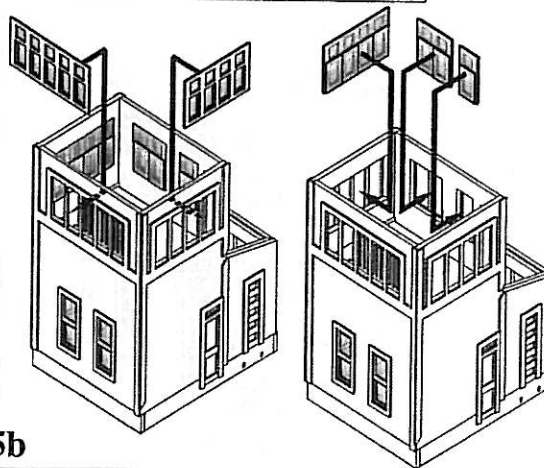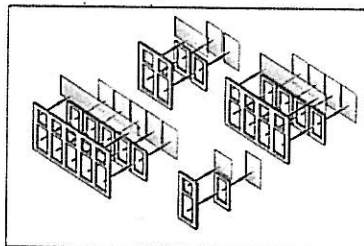

5b