


7a

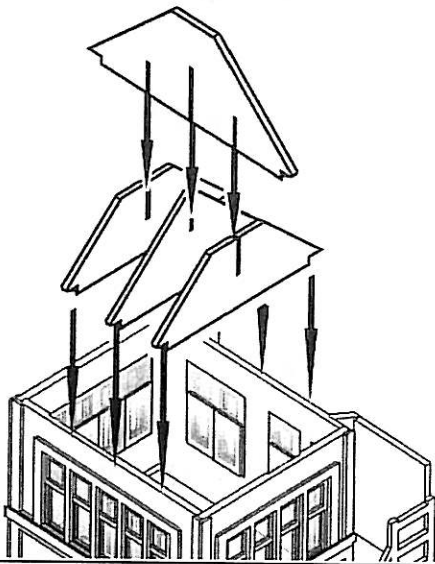

Subroofing and supports:

7A) Assemble and glue the four subroof supports together as shown. Once dry, glue the completed assembly onto the top of the tower using the notches to locate it.

7B) Remove the backing from each subroof panel and press the rafter sections onto them as shown. Press the completed panels onto the framing you just installed. Note that the panel with the hole cut in it will be on the rear of the tower.


Roof shingles and roof caps:

8A) Install the roofing shingles by removing the peel-and-stick backing from each piece and pressing it onto the subroofing as shown. Keep the edges at the corners as tight as possible, but don't worry if there is a small gap as we will cover these in the next step. Again, make sure that the sheet with the hole cut is in the back.

8B) The two strips of styrene can be used for the roof caps at the corners of the roof. Cut each strip into lengths slightly longer than needed then glue them to the shingle panels as shown using plastic cement. When dry, trim any excess flush with the bottom edges.

Paint the roof before proceeding. You can spend a few extra minutes applying a wash of black and dry-brushing highlights in the roof to help add texture.

7b

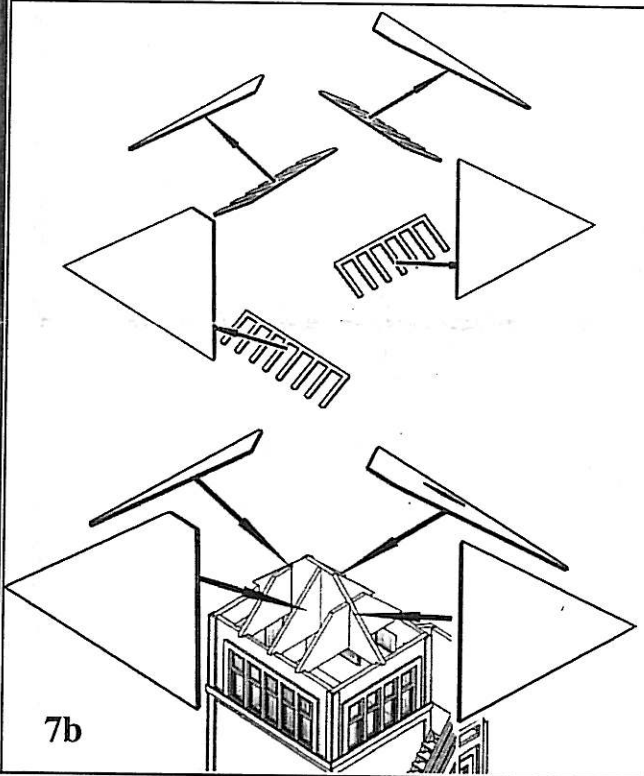

7b

