


LASER-ART STRUCTURES by BRANCHLINE TRAINS

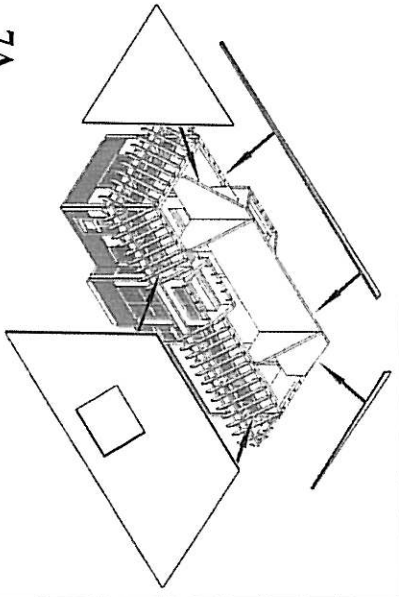

7A

The outer brackets are shorter and only glue to the support beam, keeping the outer ends in line with the longer beams. See diagram.

Sub roofing panels and shingles:

7A) Glue down the two end sections of sub roofing into place first, followed by the front and rear sections. Note that the front and rear sub-roofs have holes over the bay window areas, make sure they line up properly.

7B) Remove the peel-and-stick backing from each shingle section and place them on to the subroof panels. The shingle panels should meet tightly on the four corners.

Bay window roofing and shingles:


8A) Now glue on the eaves support beams to the bay windows. Note that there are two styles – the majority of these beams have notches in them, but four do not. Keep the two styles separate. The notched beams tab into the slots just as the others did. The four plain beams glue to the outside of the bay window walls as shown.

8B) Glue the two subroof sections to the tops of the bays, followed by the peel-and-stick shingle panels.


Chimney and roof caps:

9A) Three strips of styrene have been included to be used as roof caps. Cut these to rough length and glue into place along the roof panel edges with plastic cement. Once dry you can trim them to the exact length needed.


One the glue is dry you can paint the roof. A few extra minutes spent here will really pay off since the roof is so visible on most layouts. We like to use a dark gray (“Weathered Black” or “Grimy Black”) as a base color, followed by a wash of black to pick out the shadows and lighter gray or tan dry-brushed highlights to add texture. See the photos in the instructions or on the box label for ideas.

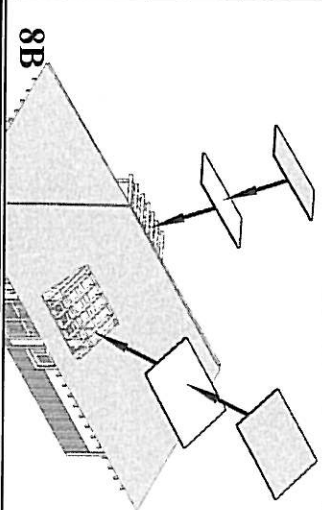

8B

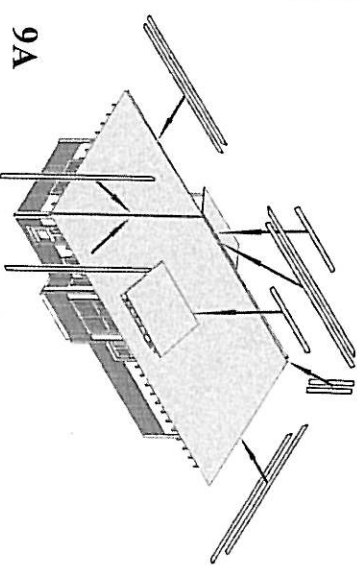


9A

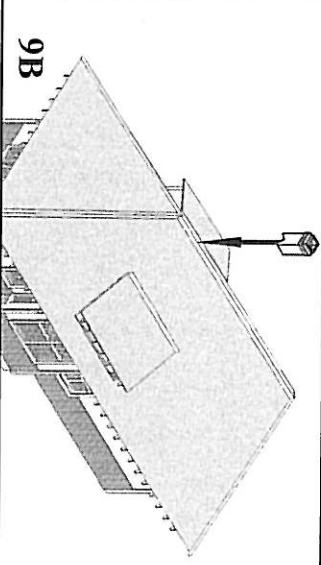

9B

9B) To complete the roof, add your chimney. The chimney is resin and needs to be sanded or filed to match the roof angle. Once you’re happy with the fit paint the chimney your favorite brick color, then give it the same wash and dry-brush treatment you gave the roof. When dry, cement the chimney into place using contact cement or epoxy.

8A

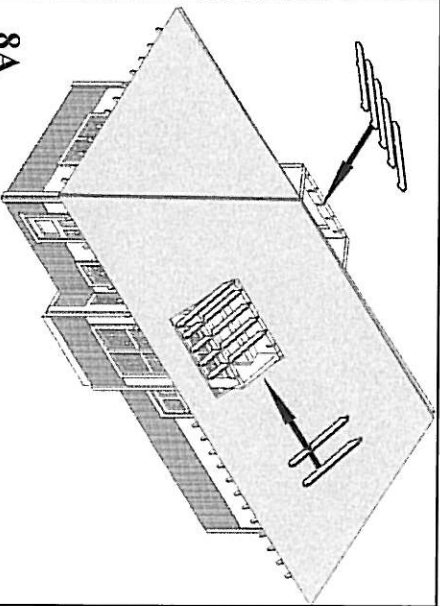

7B

