

1d

1C) Carefully remove the NBW (nut-bolt-washer) castings from their sprues leaving about 1/16" of the stem attached for mounting. Glue the NBW casting into the holes on the inside of the inner trusses as shown.


1D) Glue the outer truss assemblies to the center truss (with the spacer and rods facing in) using white glue making sure that the both top and bottom edges and ends are flush. Clamp or weight each section until dry.

**Floor assembly:**


2) Glue the three lower flooring panels together as shown with the panel with the diagonal cross sections on the bottom. Lastly, glue the smaller section across the top of the other two making sure that it is centered since it will support the track when installed on the layout.

**Truss and floor assembly:**

3) Glue the truss sections into the slots in the floor making sure to keep the NBW castings facing inwards.

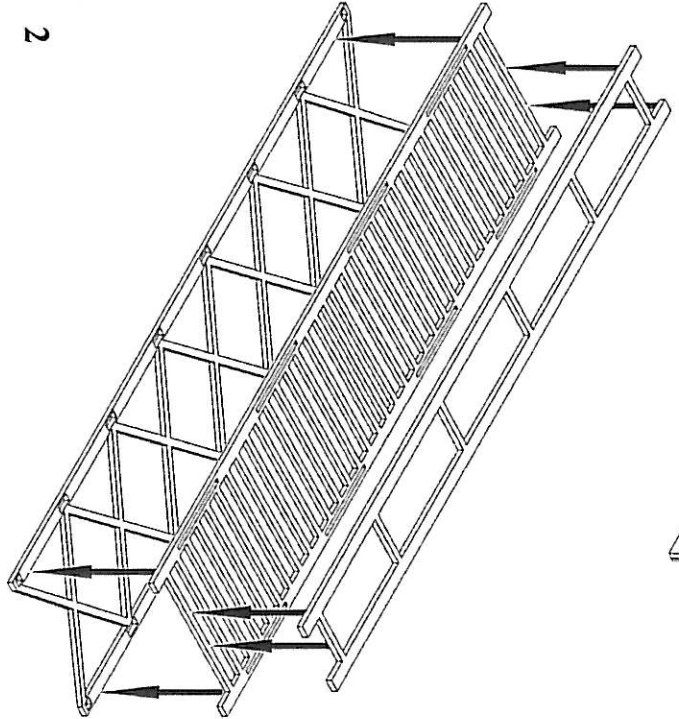

2

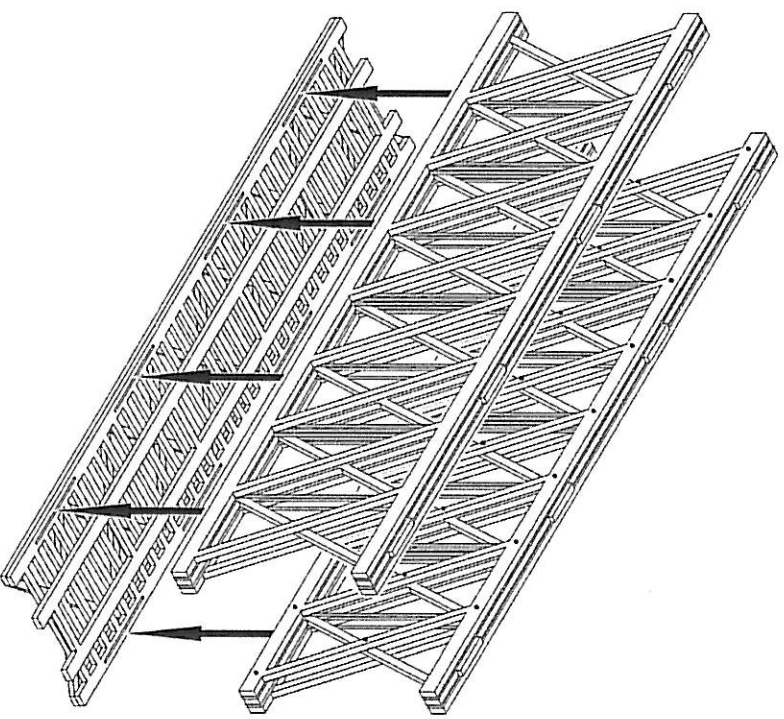

3