

Subroof:

4) Locate the two large sub roof panels and glue them into place via the tabs on the tops of the building walls (see diagram for placement). Make sure you have the notch holes for the upper dormer on the proper ends.




Upper Roof Dormer:

5A) Glue the four roof dormer wall sections together as you did the main structure. These will then tab down into the subroof panels. Any gaps at the base of the dormer will be covered up by the trim pieces. Now apply the trim by removing the peel-and-stick backing and pressing them into place. The front and rear pieces will overlap the sides (as before) to make a neat corner.

5B) Now apply the two small subroof pieces to the dormer using white glue.

Foundation:

6) Remove the peel-and-stick backing from each section of stone foundation and press them into place. Start by installing the two side sections aligning them with the sides and bottom of the structure walls. Next, install the front and rear sections. These will overlap the sides to give you a clean corner. Note that the front foundation section has two notches in it to allow the application of the front steps.

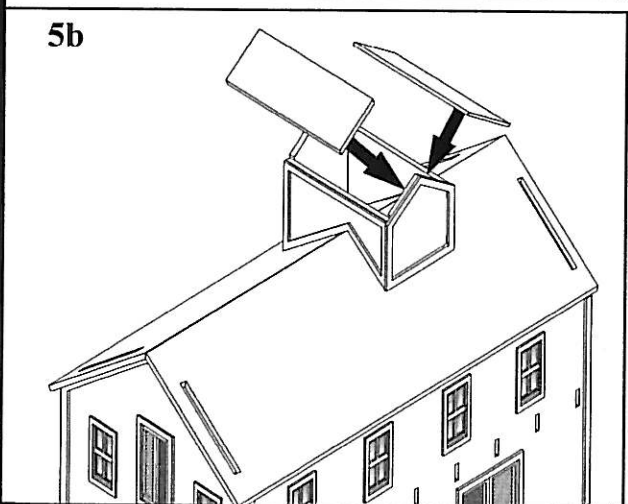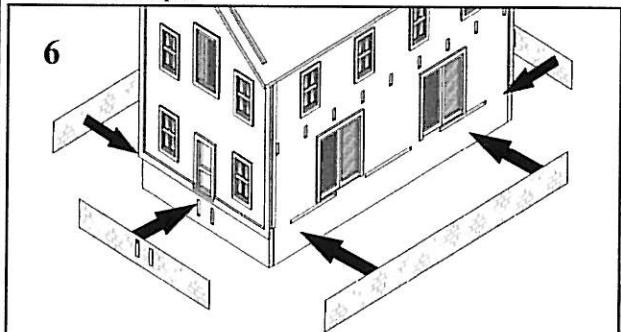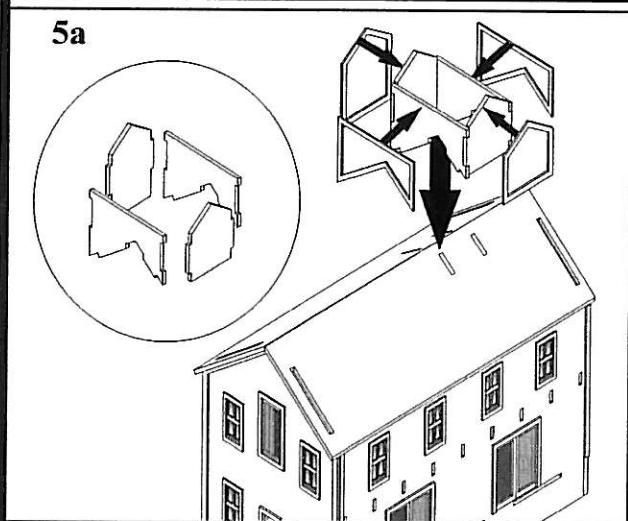

Dock supports and roof posts:

7A) The dock supports are located on the 1/16 plywood sheet. Each section has a front and rear half. These will need to be glued together with white glue before they are installed onto your structure. Make sure both halves are properly aligned to form a criss-cross pattern in the centers of each piece (see diagram)

