



The main doors are assembled in the same manner. First apply the inner door panel to the outer door panel for each door. Now apply the finished door to its frame and insert into the wall opening. (Note that we will be adding the left side loading dock door latter).

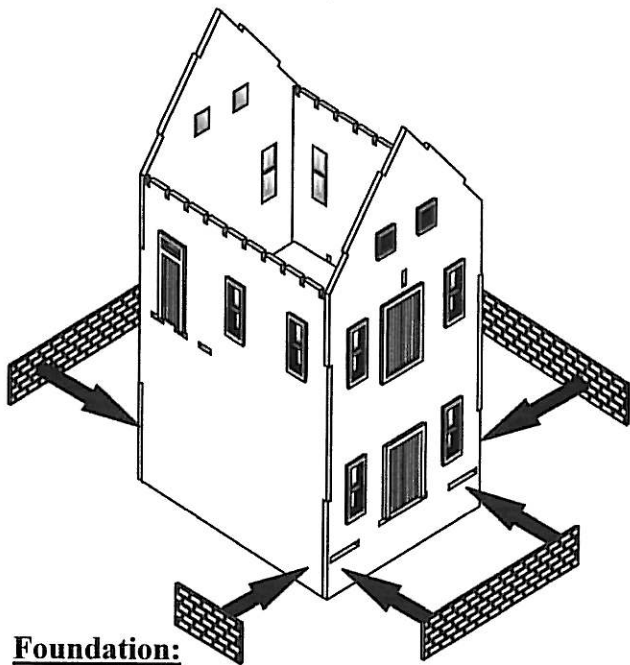

Foundation:


3) A pre-cut peel and stick stone sheet is provided to represent the foundation. Remove each section from the sheet and press into place. Test fit each piece before pressing into place. Install the two side pieces first aligning them with the sides and bottom of the structure walls. Note that there is a section of the structure that will not be covered with the foundation piece where the water wheel will be placed later (see diagram). Once the side pieces are applied, the front and rear pieces can be installed. These overlap the sides to give a clean corner

Once in place paint the stonework with a gray or brown paint. Spend a few minutes and pick out some of the individual stones with lighter and darker shades of your base color. Once this is dry follow with a wash of light gray or black to represent the mortar between the stones (Light gray will make the foundation appear newer, black older). Finally dry brush some light gray or tan highlights into the stones

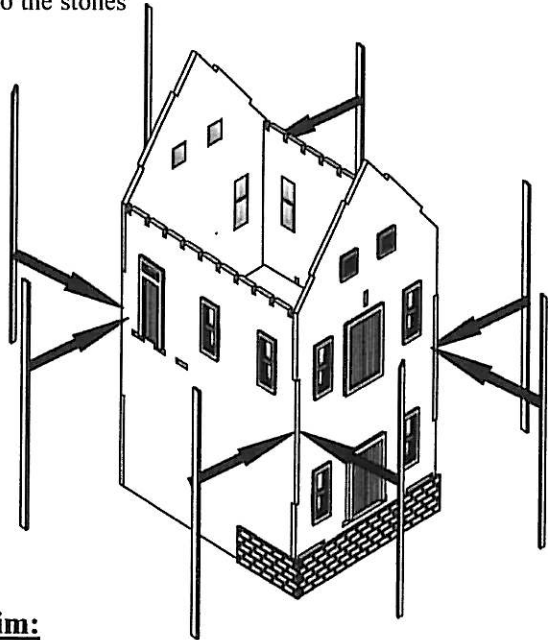

Trim:

4) The corner trim is found on the 1/64 trim sheet. You may find it easier to paint the trim pieces before they are installed, then touching up any visible edges after installation as needed. Remove the peel-and-stick backing from each piece and press them into place. Note that each corner is made up from two strips, one wider than the other. Start with the thinner of the two strips, applying it flush with the corner of the building. Now add the wider strip so that it overlaps the corner and the edge of the narrower strip. This will create a neat, even corner.

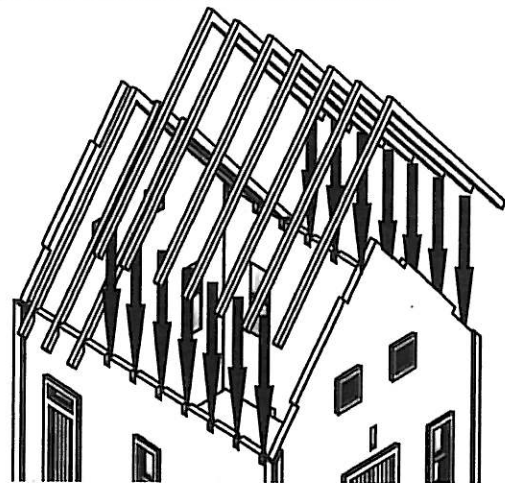

Rafters and subroofing:

5A) Glue each rafter one into the slots along the tops of the side walls as shown.