


Before you assemble the large lower doors you will need to decide whether you want to model them open or closed. If you want to model the doors open, then apply both sets of scribed door panels back to back before applying the outer trim. (If you choose to use the doors in the closed position you will need to leave the inner panels off). The completed doors can then be placed into the frame.

2C) Finally assemble the two front doors as shown, then press them into the openings.


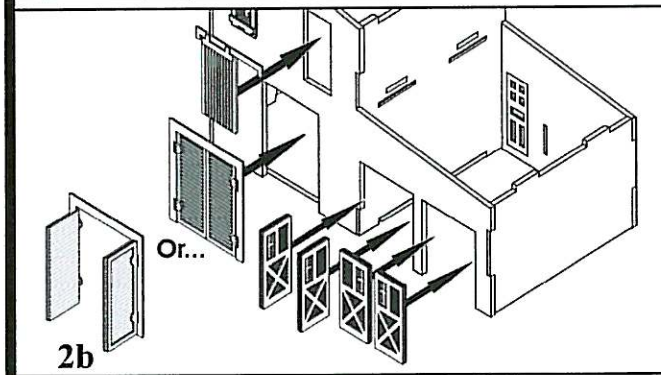


Subroofing:

3) Install the sub roof panels by gluing them into the tabs on the front and rear walls as shown. The lower panel will tab into the slots in the rear wall and fit down onto the tabs on the back wall.

Trim:

4A) All of the trim is held in place using the peel-and-stick adhesive. Start with the upper trim that runs along the edge of the roof. This should be applied flush with the top surface of the roof.

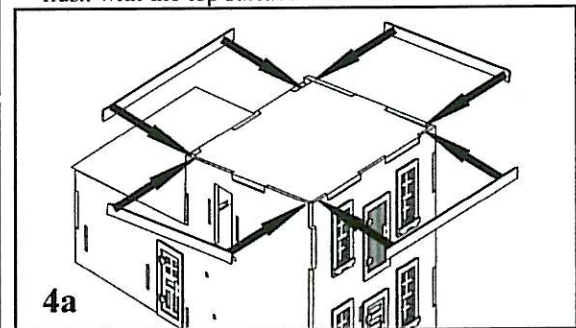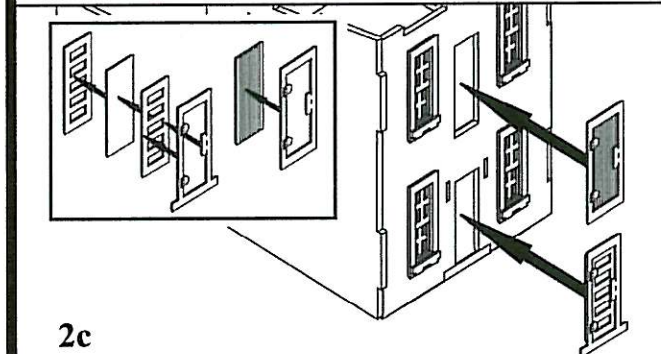

4B) Now add the side and corner trim as shown. Note that each corner consists of a wide and narrow piece. Apply the narrow section first, flush with the edge of the wall. Now apply the wider trim section so that it overlaps the edge of the narrower piece to form an even corner.

