

5


**Side shed and upper deck:**

5) Assemble the upper entryway walls and the lower shed walls as shown. Now assemble the two doors as you did the others, then press the doors into place. Finally, glue the two assemblies into the slots on the side walls.

**Side stairs and trim:**

6A) Assemble the stairway by first gluing the inner stringer to the side wall of the building as shown (the back edge of the stringer should be flush with the back edge of the entryway floor). Now glue the other stringer to the railing keeping the bottom edges of the two pieces flush along the bottom edge. Next glue this assembly into place on the bottom of the entryway floor opposite the inner stringer. Now start applying the pee-and-stick steps one at a time.

6B) Next you can add the two peel-and-stick upper roof panels and the final trim pieces and stair braces as shown.

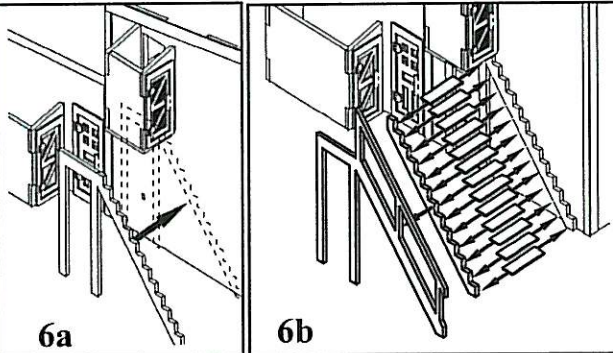

6a


6b

**Front door overhang:**

7) Glue the two side supports into the slots on each side of the front door, then add the peel-and-stick roof panel, pressing it into place on top of the supports.

**Roofing:**


8) Tar paper roofing has been cut into strips and can be glued into place with white glue. Overlap each strip slightly as you work your way across each roof. Do the same for the side additions and front door covering. For some interest you can also use tar paper over the siding of the small addition as shown.

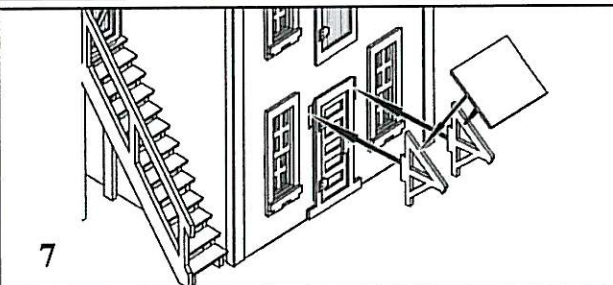


7

**Chimney, vent pipe and ladder:**

9) Glue the chimney into place wherever you think it looks best. The vent pipe can be glued to a small strip of roofing paper and placed as shown. The ladder can be glued in any position you want.

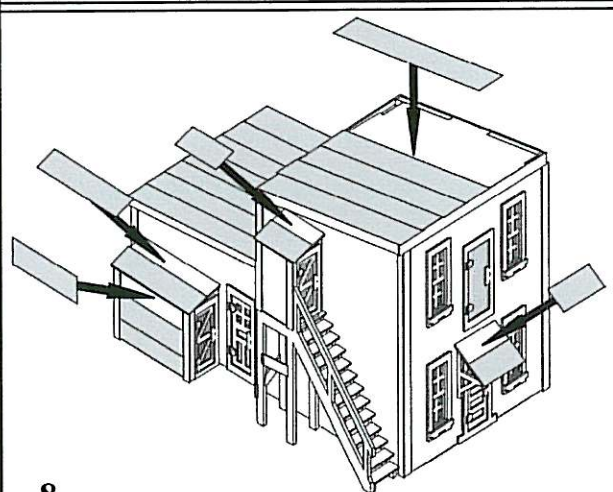

8

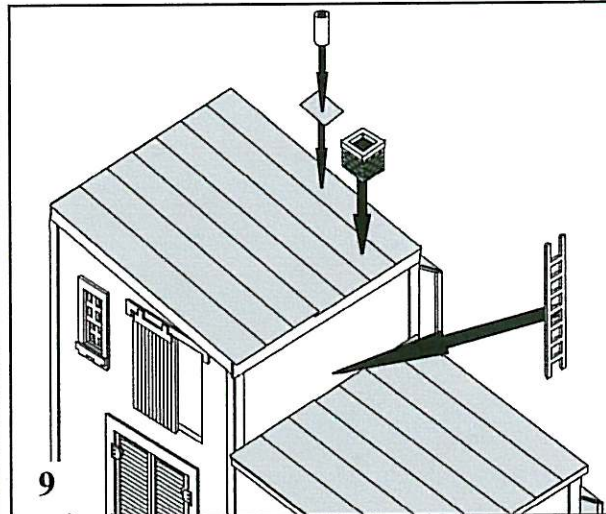

9

Your kit is now completed and ready for your layout. We hope you've enjoyed this kit. If you have any problems or comments, please contact us.