

LASER-ART STRUCTURES by BRANCHLINE TRAINS


Wall trim:

4A) Apply the corner trim starting with the end panels, removing the backing from each piece and pressing it into place. Start with the upper end trim section which should sit flush with the top edge of the walls. Now apply the two corner trim boards flush with the top edge of the walls. The two upper trim sections can be added next, flush with the top edge of the walls and with the corners of the wall.


4B) Now add the trim to the front walls starting again with the uppermost piece flush with the top edge of the walls. Next install the two L-shaped upper sections. The vertical corners should overlap the trim you just installed to give a neat corner. Finally, install the two corner boards again overlapping the existing trim (see diagram).

4C) Add the back wall trim as you did the front. Be sure to add the two upper doors to the back of the trim before applying them to the structure as shown.

4a

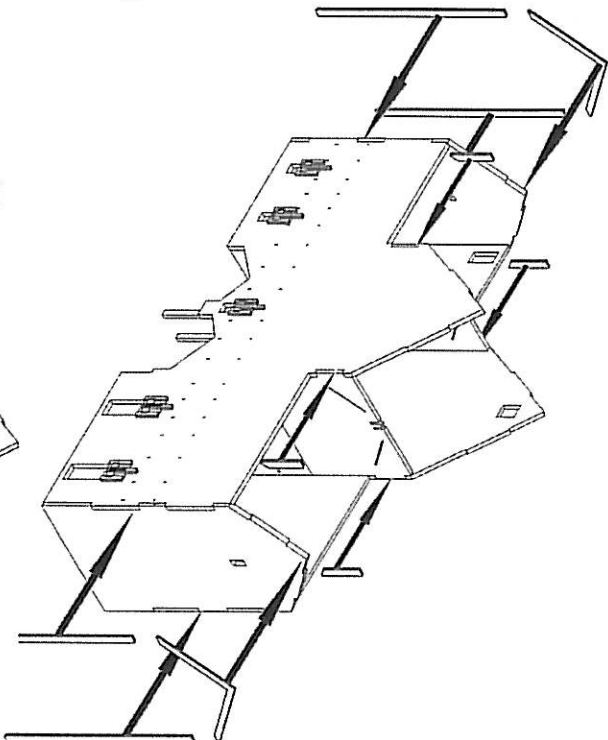

4b

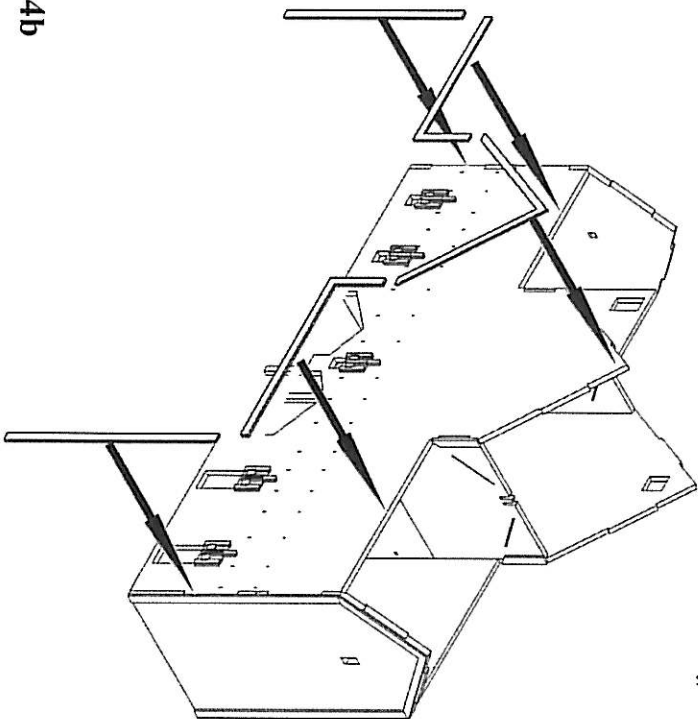

4c

